



Parts list for TP01262

No.	Description
1	Cable
2	Output Connectors
3	Tapping screw
4	Gland bush
5	Seal plug
6	Connection Wire
7	Handle
8	Square switch box
9	Pump casing
10	Pump rear housing
11	Earthing screw
12	Spring washer
13	Earthing wire washer
14	Grooved metal gasket
15	Breadboard
16	Motor end cover
17	Wave spring washer
18	Cable Shield Cup
19	Cable clip
20	Cable fixed block
21	Capacitor
22	Tapping screw
23	Ball Bearing
24	Block spring
25	Rotor
26	Washer
27	Frame seal
28	Motor front cover
29	O-ring
30	Clamping ring
31	Tapping screw
32	Flat washer
33	Impeller
34	Clamp nut
35	Retainer ring
36	O-ring
37	Pump Base
38	Bolt
39	Stator