 
 


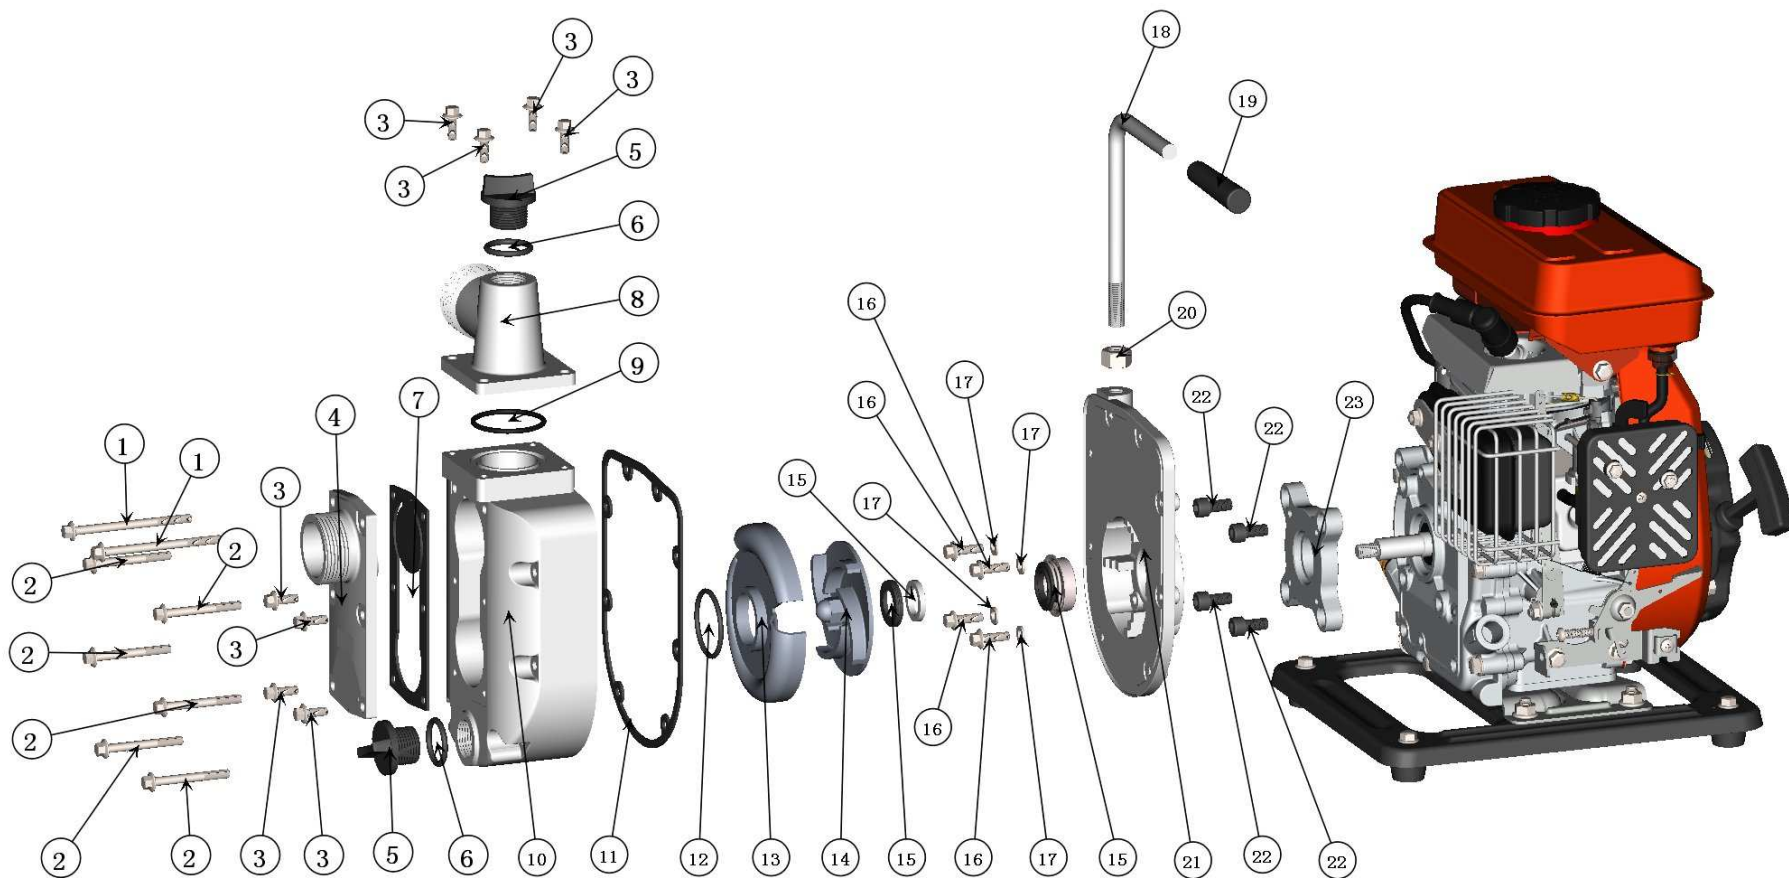


序号	零件编码	零件名称		数量	
		中文	英文		
1	15000328	螺栓 M6×85 GB5787	BOLT,FLANGE,M6×85 GB5787	2	
2	15000329	螺栓 M6×55 GB5787	BOLT,FLANGE,M6×55 GB5787	6	
3	15000327	螺栓 M6×16 GB5787	BOLT,FLANGE,M6×16 GB5787	4	
4	21040004	进水口	Inlet	1	
5	21021002	堵头	Cap filer	1	
6	21030002	堵头“O”密封圈	O-ring	1	
7	21070005	单向阀	One-way Valve	1	
8	21050004	出水口	Outlet	1	
9	21100004	出水口胶垫	Packing outlet	1	
10	21170012	泵壳	Casing	1	
11	21080009	连接盘密封圈	Gasket, terminal pad	1	
12	21190003	涡流壳密封圈	Gasket, Case volute	1	


13	21180005	涡流壳	Case volute	1	
14	21150013	叶轮	Impeller	1	
15	21011011	水封总成	Water Seal Assy	1	
16	15000085	螺栓 M6×20 GB5787	BOLT,FLANGE,M6×20 GB5787	4	
17	15020050	垫片φ6	Washer, φ6	4	
18	10130004	水泵提手	Handle, Pump	1	
19	21194001	提手胶套	Cover,Handle	1	
20	15010020	螺母 M12 GB6170	Nut,M12 GB6170	1	
21	21130004	水泵底板	Base Plate, Pump	1	
22	15000195	内六角螺栓 M8×16 GB70	Socket_head bolt, M8×16 GB70	4	
23	12800002	连接盘	Terminal pad	1	

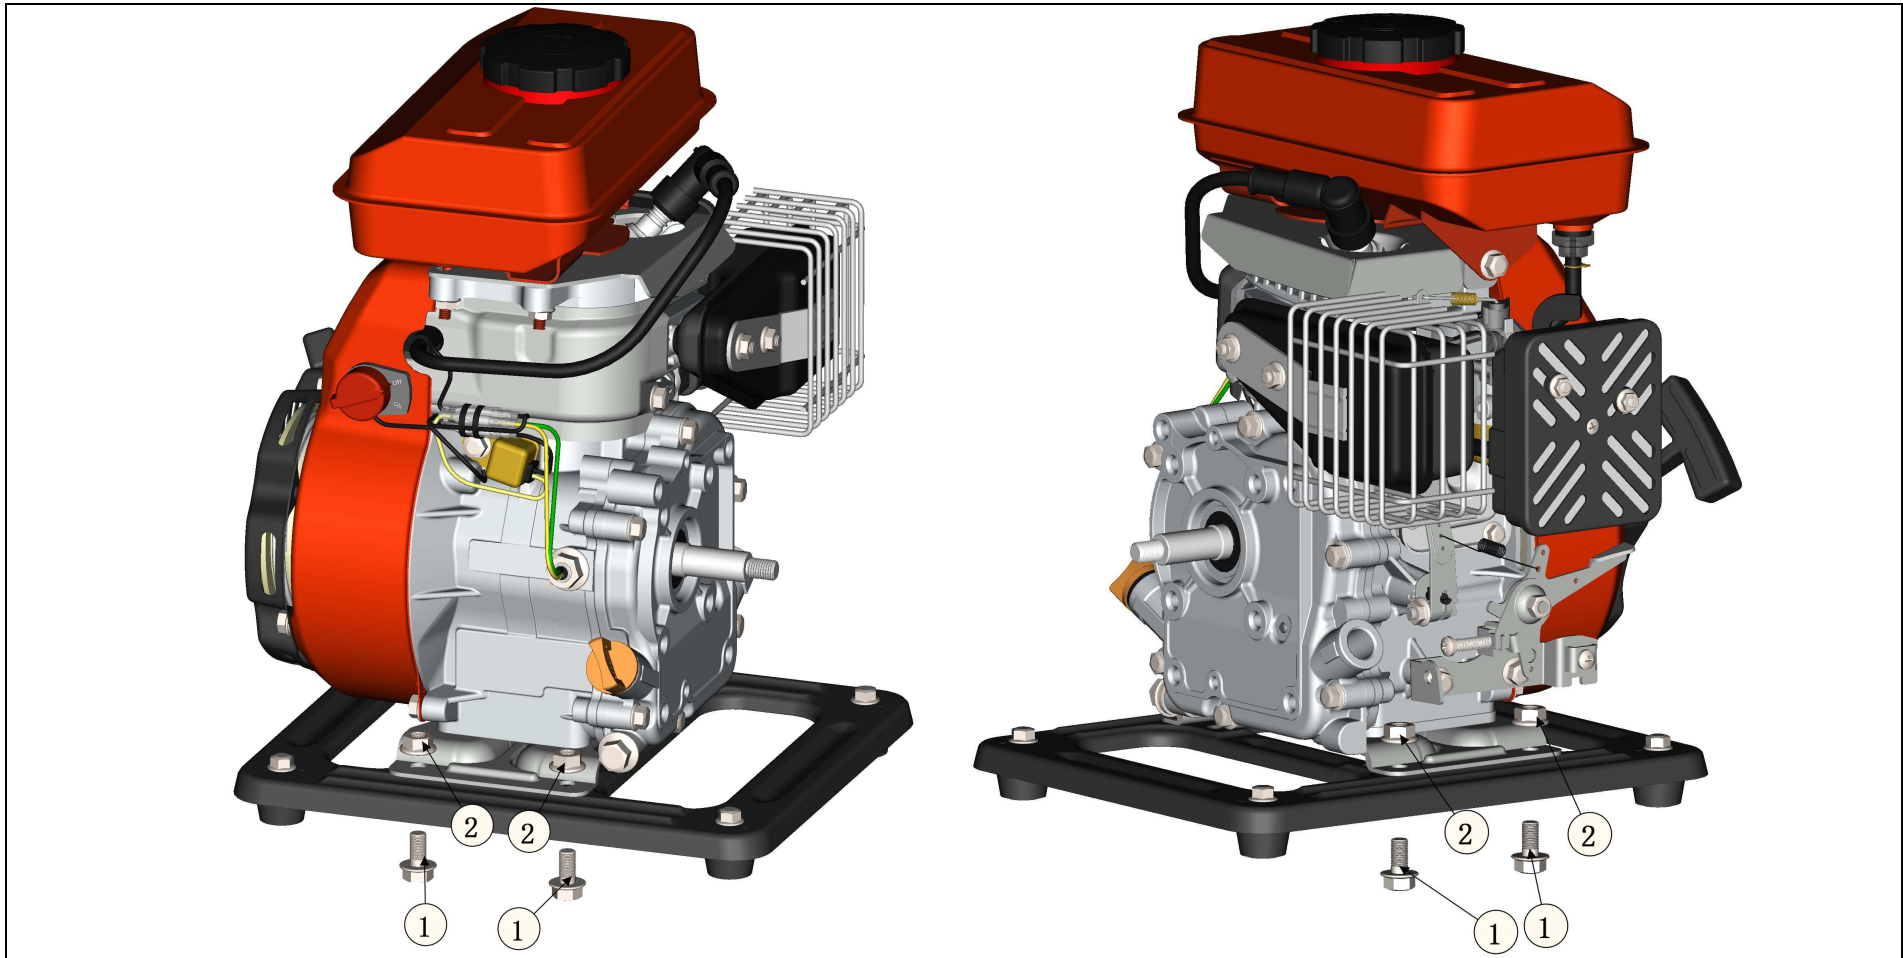


序号	零件编码	零件名称		数量	
		中文	英文		

1	15000055	螺栓 M8×16 GB5789	BOLT,FLANGE,M8×16 GB5787	4	
2	15010010	螺母 M8 GB6177	Nut, GB6177	4	

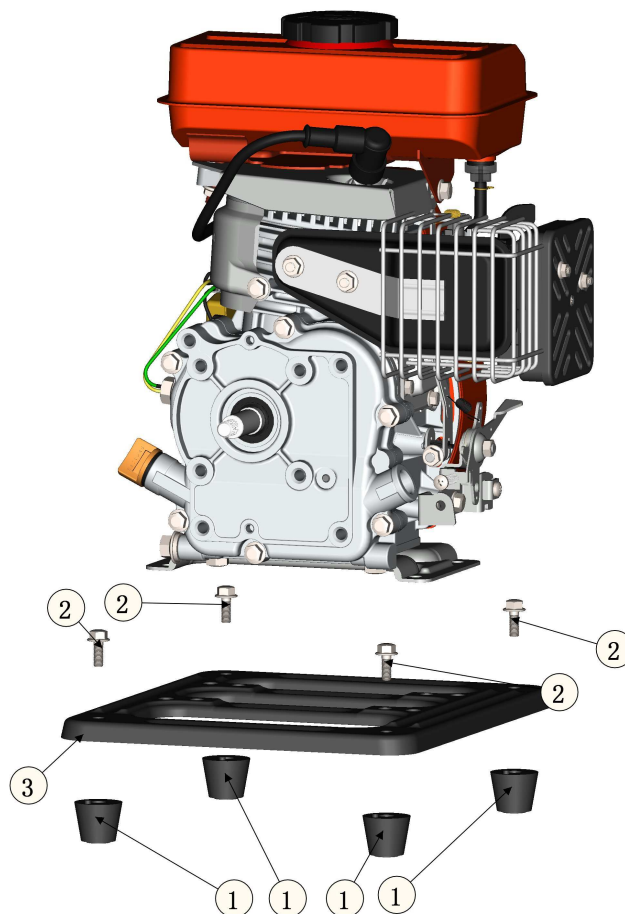 


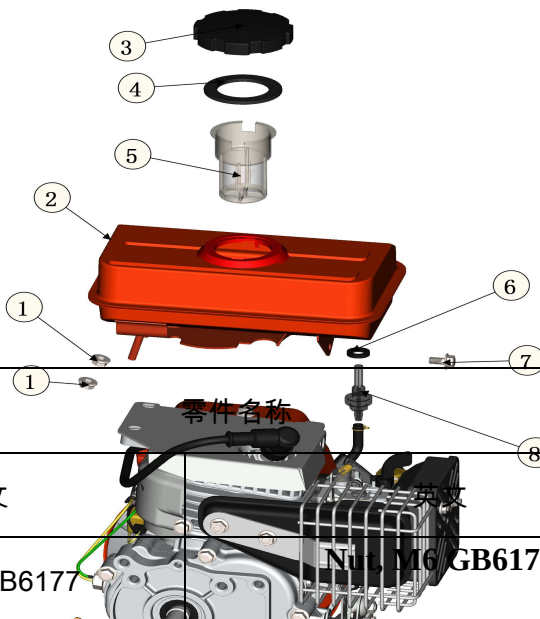 序号	零件编码	零件名称		数量	
		中文	英文		
1	11230001	减震胶套	Rubber bottom	4	
2	15000087	螺栓 M6×16 GB5789	BOLT,FLANGE,M6×16 GB5787	4	
3	11690001	水泵底座	Base, Pump	1	
					
序号	零件编码	零件名称		数量	
		中文	英文		
1	15010012	螺母 M6 GB6177	NUT M6 GB6177	2	
2	11280002	油箱总成	Fuel Tank Assy	1	


3	20707002	油箱盖组件	CAP COMP, FUEL FELLER	1	
4	20709002	O 形密封圈	PACKING,FUEL FILLER CAP	1	
5	20704004	沉淀杯过滤网	FILTER,FUEL	1	
6	20703003	O 形圈	PACKING	1	
7	15000089	螺栓 M6×12 GB5789	BOLT,FLANGE,M6×12 GB5789	1	
8	20717002	燃油过滤嘴	JOINT,FUEL TANK	1	

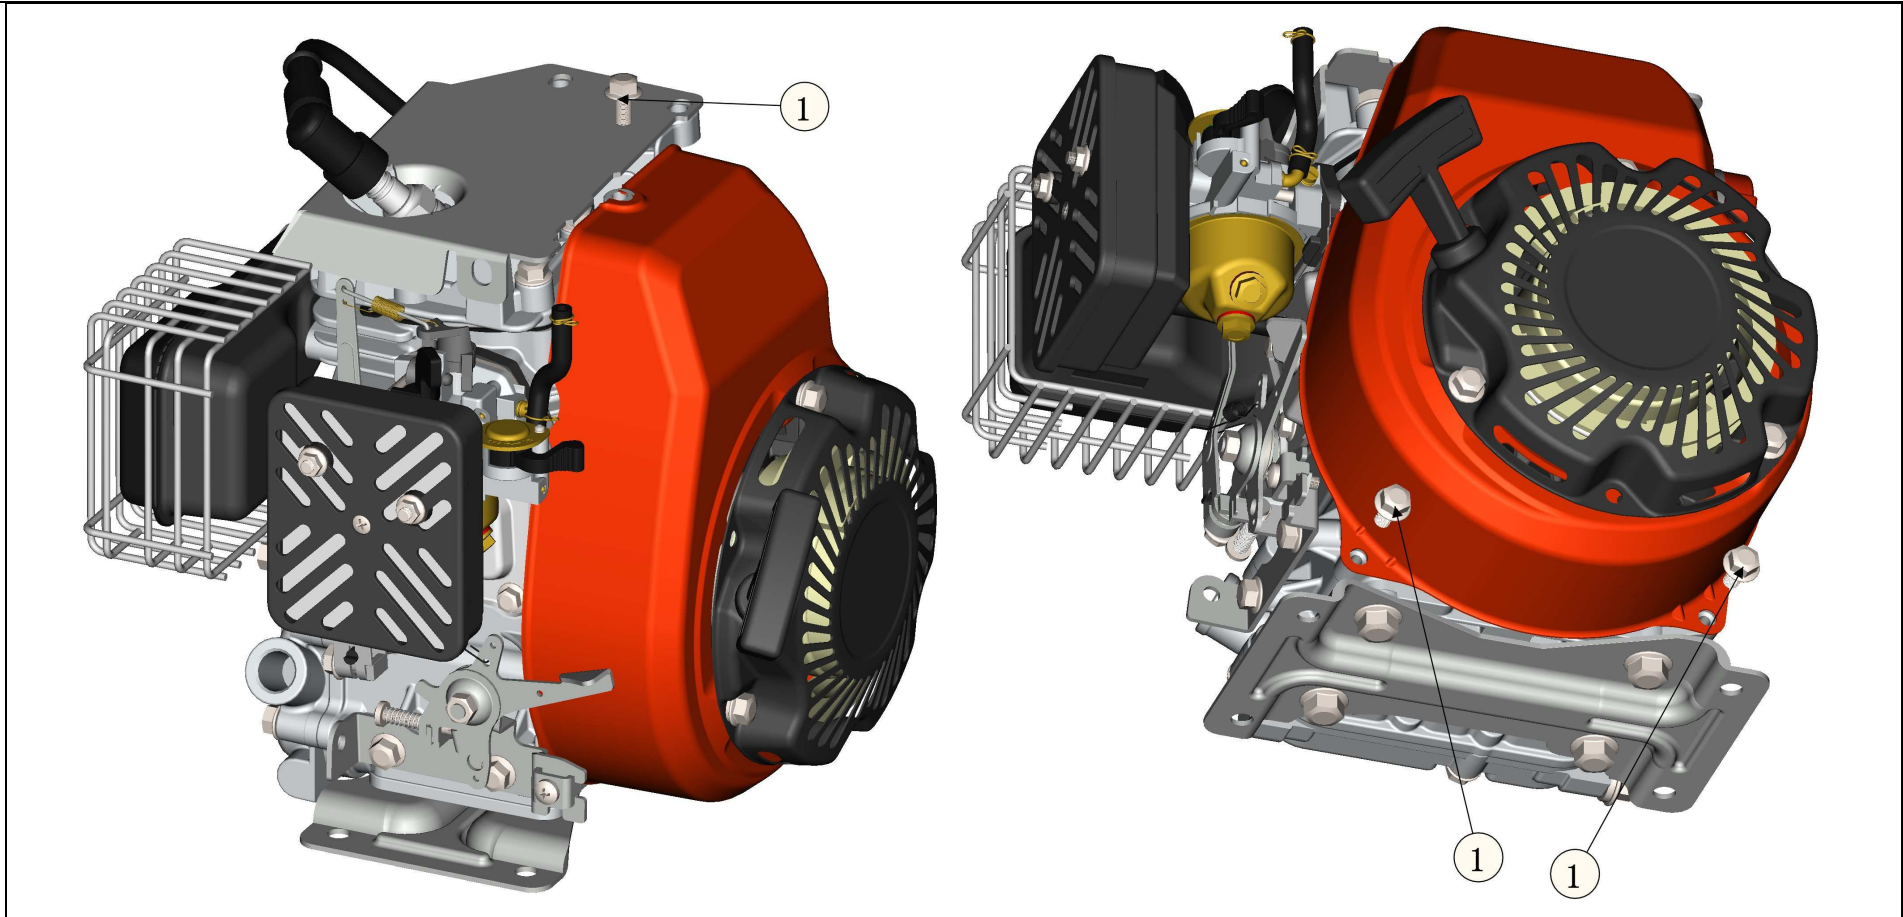 



序号	零件编码	零件名称		数量	
		中文	英文		
1	15000089	螺栓 M6×12 GB5789	BOLT,FLANGE,M6×12 GB5789	3	

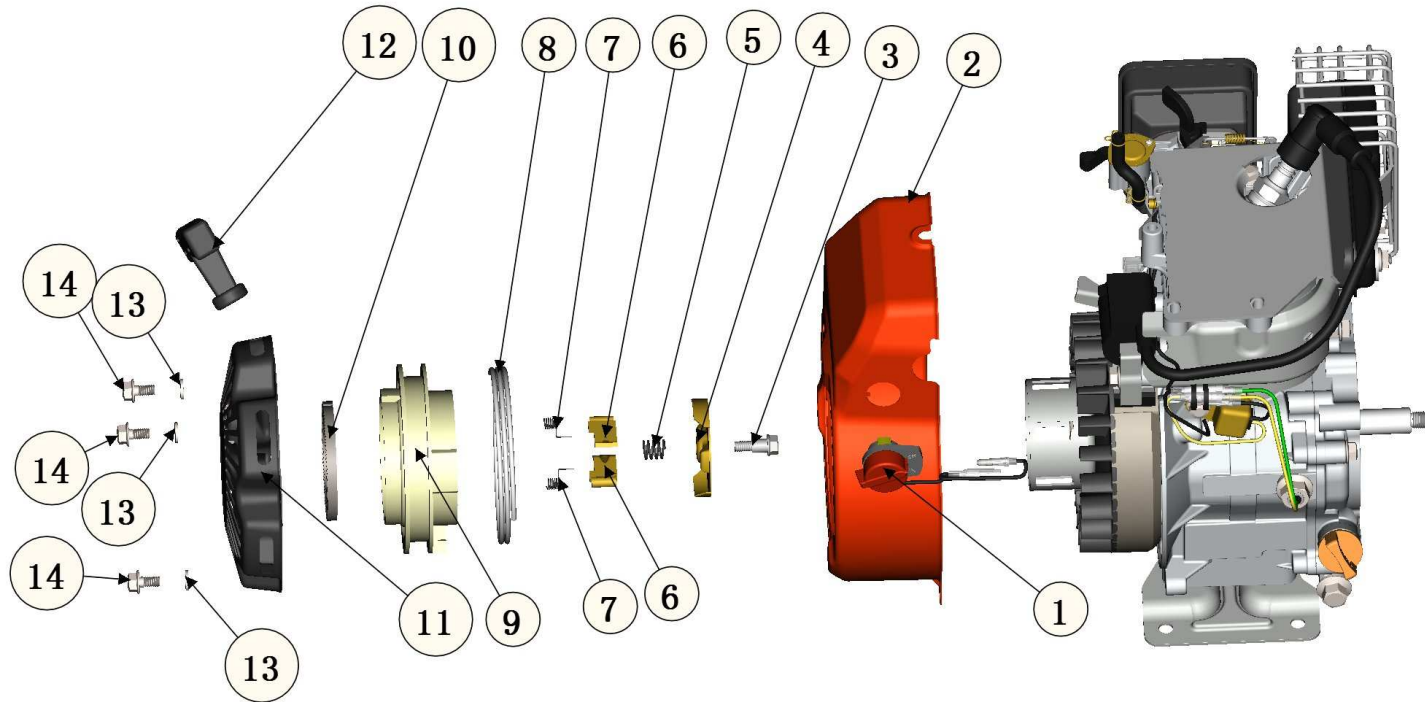 


		零件名称			
序号	零件编码			数量	
		中文	英文		
2	20501002	启动器盖组件	FAN COVER COMP.	1	
3	20508002	轴位螺钉 熄火开关(双线)	BOLT SETTING SWITCH ASSY,ENGINE STOP	1	

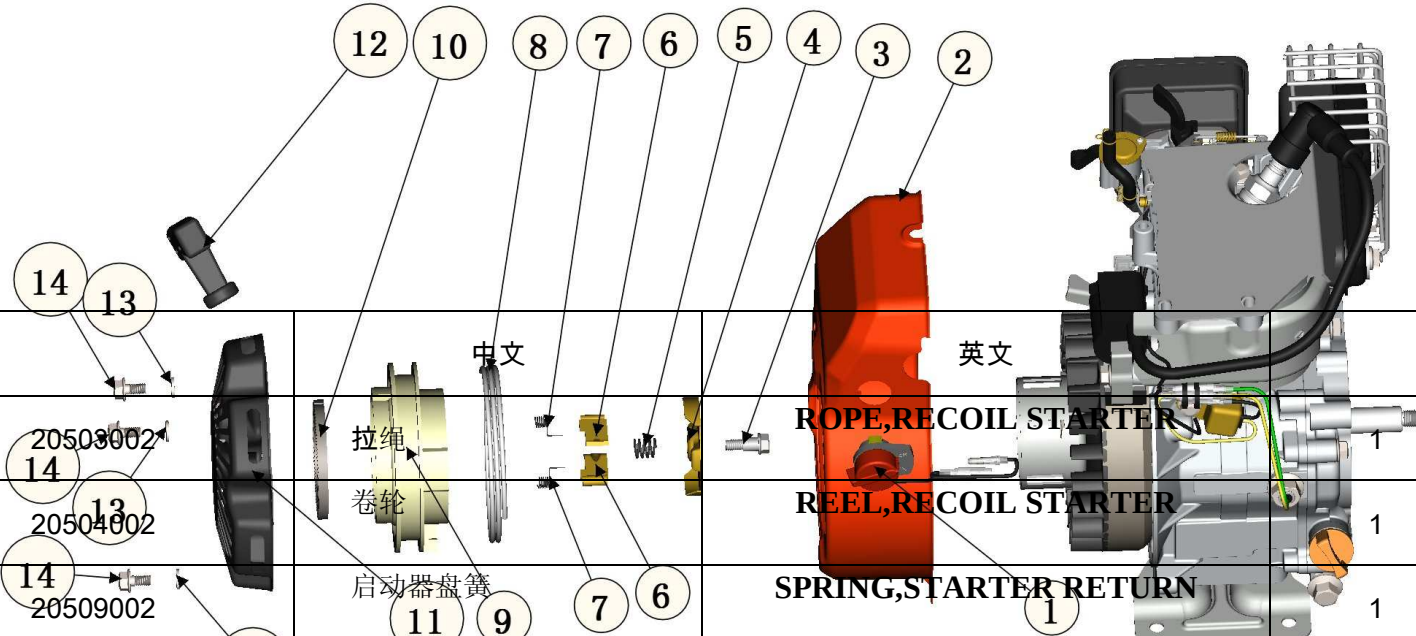 4	20506002	棘爪导板	RATCHET,GUIDE	1	
5	20516001	启动拉盘中心簧	SPRING	1	
6	20505002	棘爪	RATCHET,STARTER	2	
7	20507002	复位弹簧	SPRING,RETURN	2	
					
8	20503002	拉绳	ROPE,RECOIL STARTER	1	
9	20504002	卷轮	REEL,RECOIL STARTER	1	
10	20509002	启动器盘簧	SPRING,STARTER RETURN	1	
11	20515001	拉盘盖	STARTER COVER COMP ,RECOIL	1	
12	20502002	手把	零件名称HANDLE,STARTER	1	

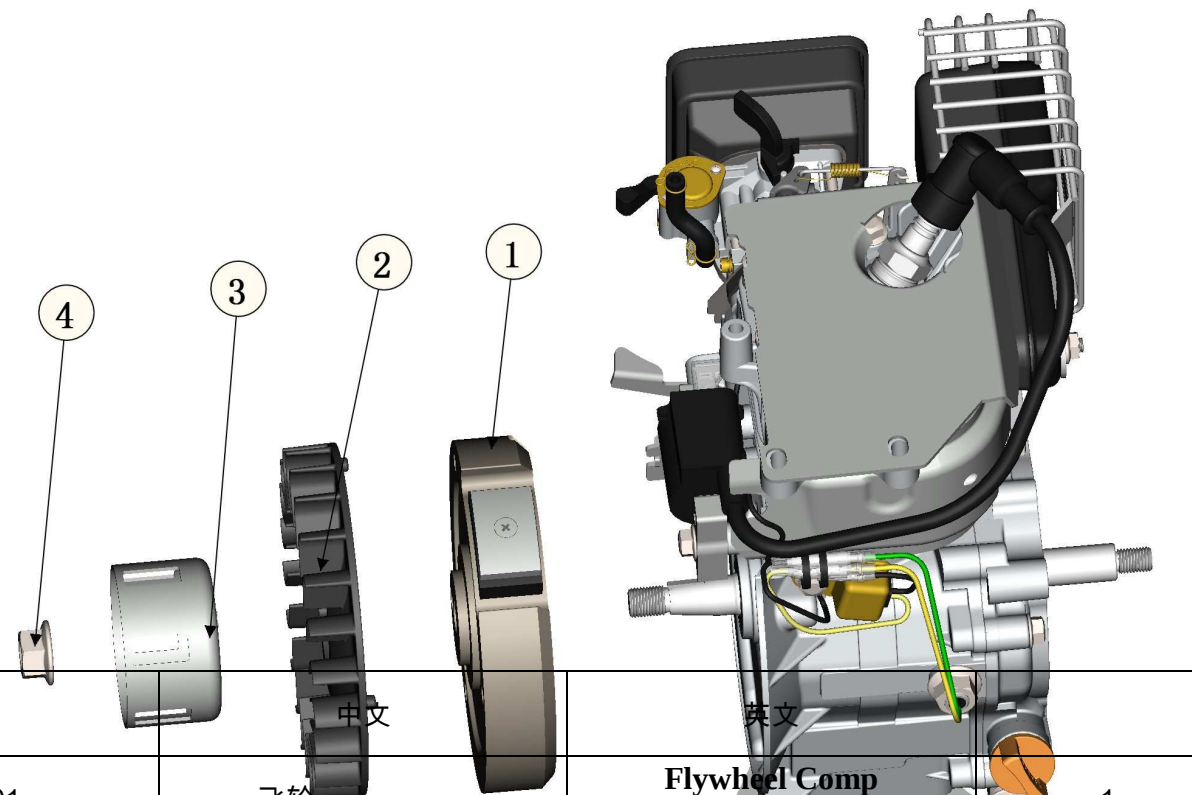 13	15020050	垫片Φ6	WasherΦ6	3	
14	15000092	螺栓 M6×10 GB5787	BOLT,FLANGE,M6×10 GB5787	3	
					
1	10650001	飞轮	Flywheel Comp	1	
2	10660002	叶轮	Cooling fan	1	
3	10580001	启动杯	Starter pulley	1	

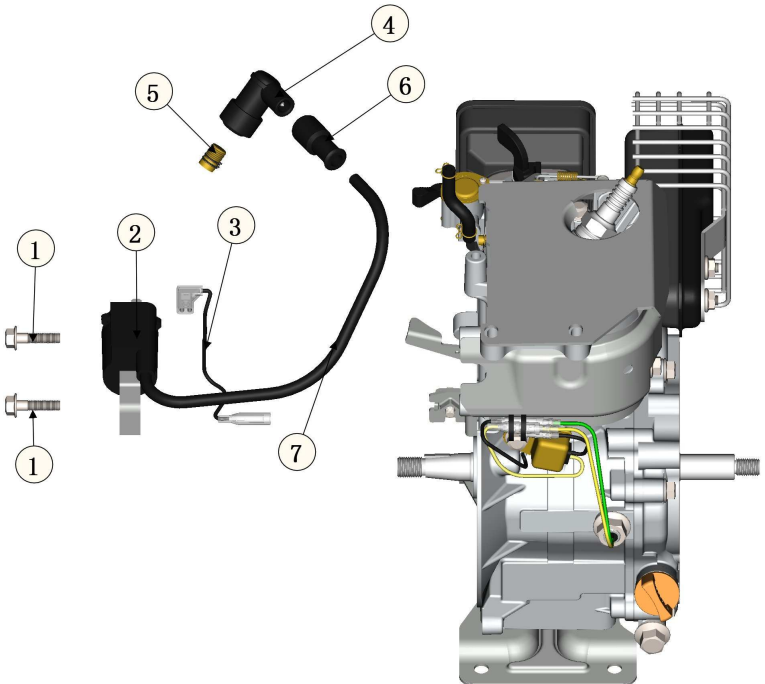 
4	15010005	螺母 M12 GB6177	Nut,M12 GB6177	1	
					
序号	零件编码	零件名称		数量	
		中文	英文		
2	21811001	点火器主体	Ignition coil	1	
1	15000081	螺栓 M6×25 GB5789	BOLT,FLANGE,M6×25 GB5789	2	
3	21812001	熄火线	CORD,STOP SWITCH	1	

4	21815001	点火器冒	Cap, Ignition coil	1	
5	21816001	点火器冒卡子	Clip, Ignition coil	1	
6	21814001	点火器胶套	Cover, Ignition coil	1	
7	21813001	点火线	Ignition wire	1	

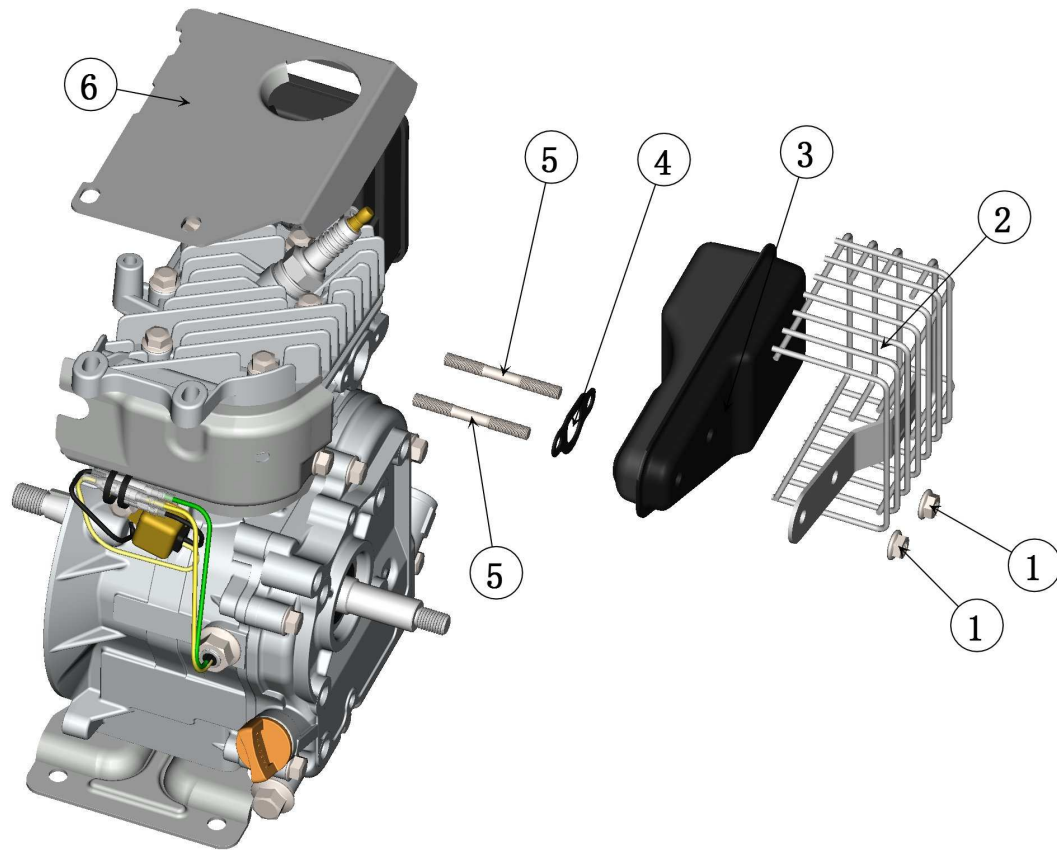 


序号	零件编码	零件名称		数量	
		中文	英文		
1	15010012	螺母 M6 GB6177	nut M6	2	

2	12700001	消声器防护罩	Muffler protector	1	
3	10520001	消声器总成	Muffler	1	
4	10590001	消声器垫	Muffler gasket	1	
5	15000098	排气双头螺栓 M6×55	Ex. Stud bolt M6*55	2	
6	11860001	缸盖罩	cylinder head hood	1	

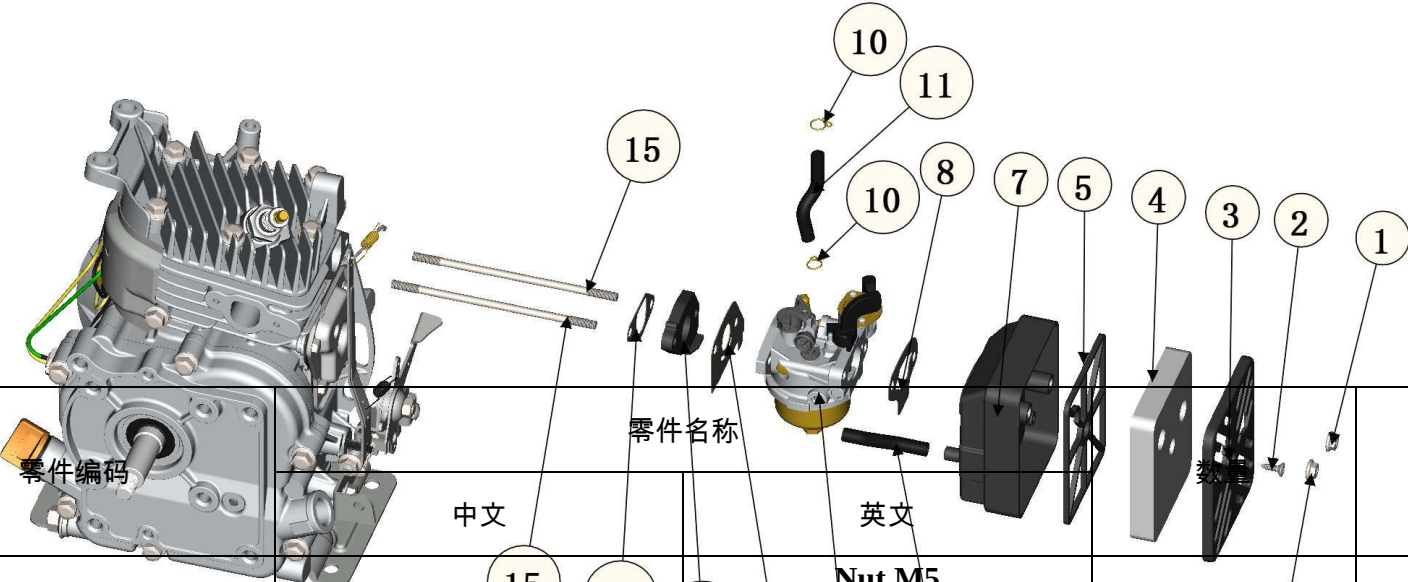 
					
序号	零件编码	零件名称	中文	英文	数量
1	15010014	螺母 M5	螺母 M5	Nut M5	2
2	20621001	自攻螺钉 M5×16	自攻螺钉 M5×16	Screw M5*16	1

3	20608004	空滤器罩	Air cleaner cover	1	
4	20601006	空滤器滤芯	Air cleaner element	1	
5	20617003	隔板	Air cleaner grid	1	
6	11930008	废气管	Exhaust pipe	1	
7	20610003	空滤器罩底板	Silencer plate	1	
8	10830001	空滤器纸垫	Air cleaner gasket	1	

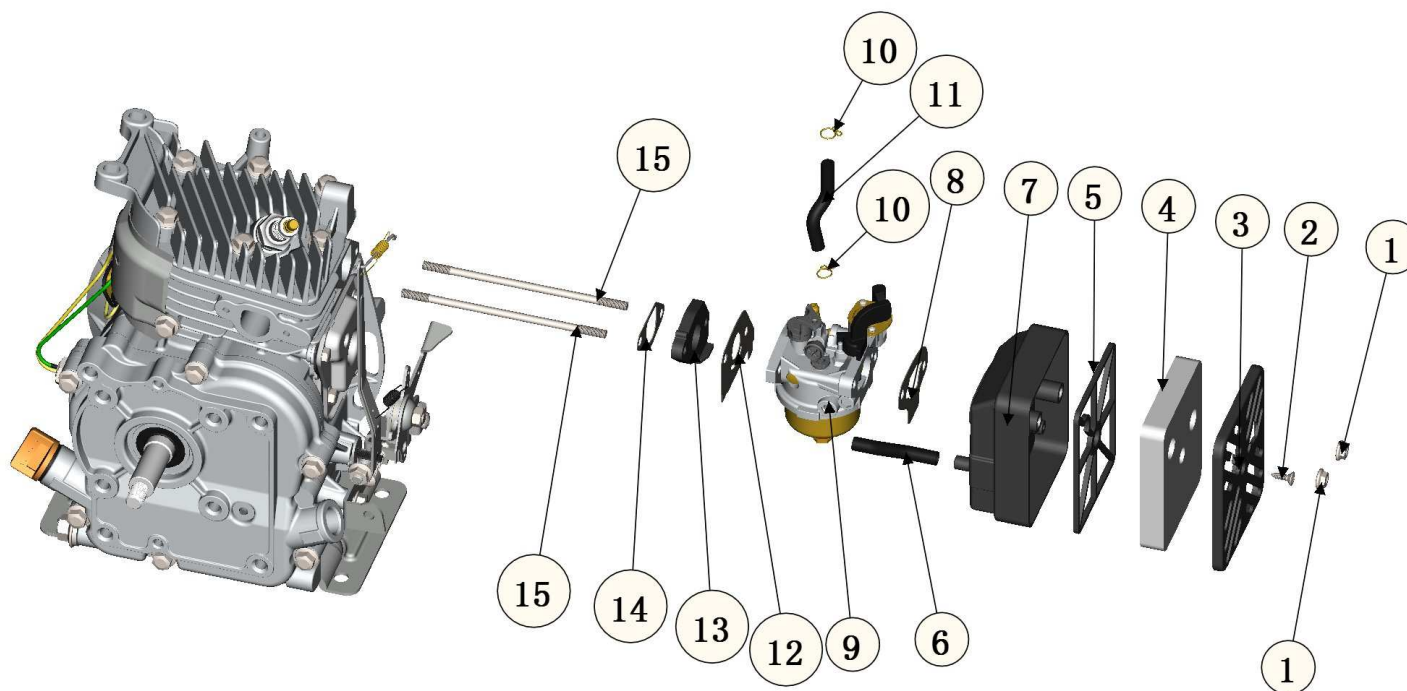 


序号	零件编码	零件名称		数量	
		中文	英文		
9	10500001	化油器总成	Carburetor assy	1	
10	10800001	油管卡圈φ8	Oil guide clip	2	

11	10790001	油管 $\phi 4 \times \phi 8 \times 65$	Oil guide	1	
12	10560001	化油器纸垫	Carburetor gasket	1	
13	10530001	化油器隔热板	Connecting block	1	
14	10570001	隔热板纸垫	Connecting block gasket	1	
15	15000097	进 气 双 头 螺 栓 M6×117	In. Stud bolt M6*55	2	

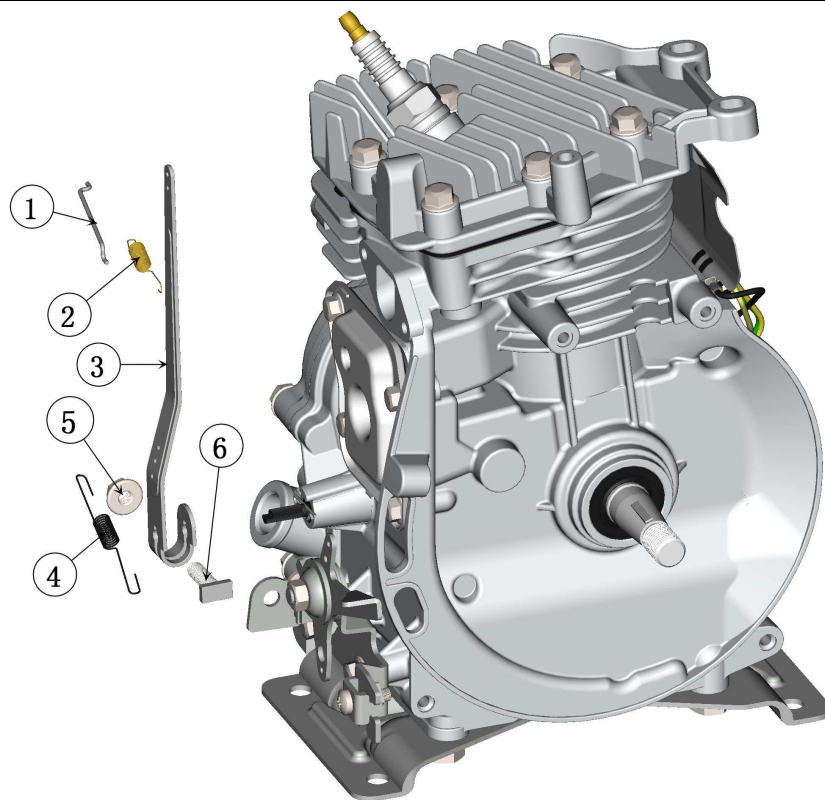 


序号	零件编码	零件名称		数量	
		中文	英文		
1	10480001	拉杆	Pulling rod	1	

2	10470001	拉簧 B	Fine regulating spring	1	
3	11180001	调速臂	Regulating arm	1	
4	10460001	拉簧 A	Back spring	1	
5	15010012	螺母 M6 GB6177	Nut M6	1	
6	15000084	方头螺栓 M6×21	Bolt M6×21	1	

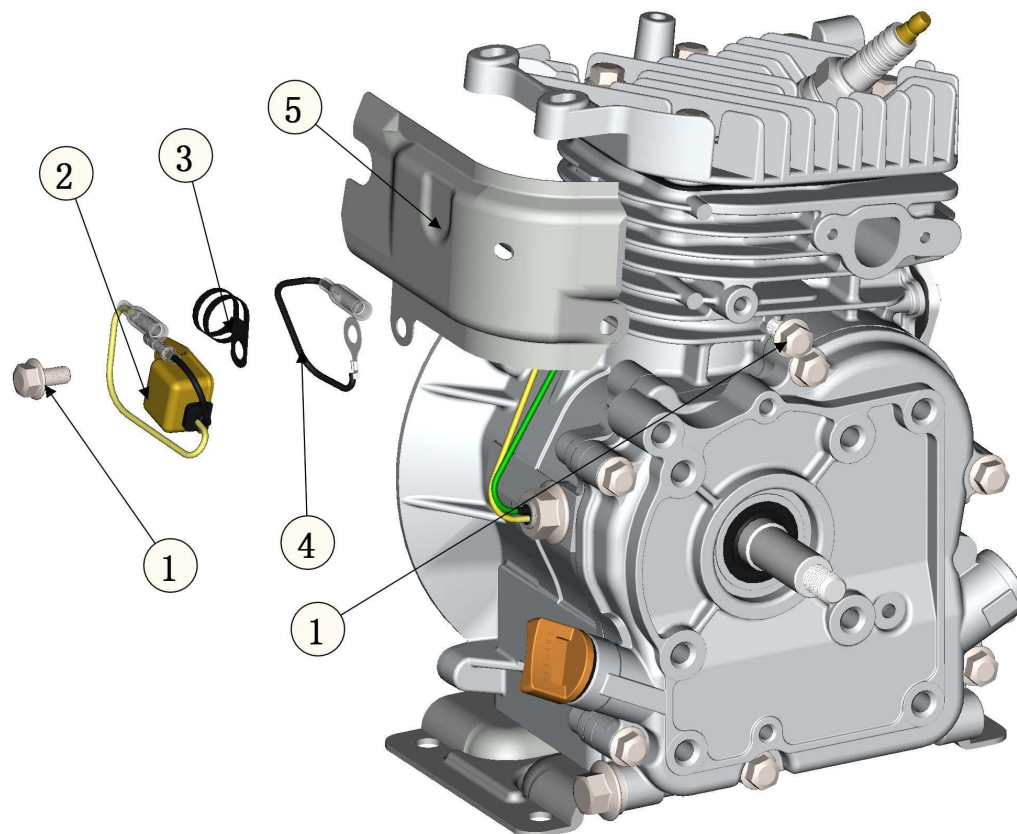 


序号	零件编码	零件名称		数量	
		中文	英文		
1	15000089	螺栓 M6×12 GB5789	Bolt M6×12	2	

2	10690001	单向导通器	one-way	1	
3	10710001	条形线夹	Strip clip	1	
4	21256001	搭铁线	Earth wire	1	
5	10430001	导风板	wind board	1	

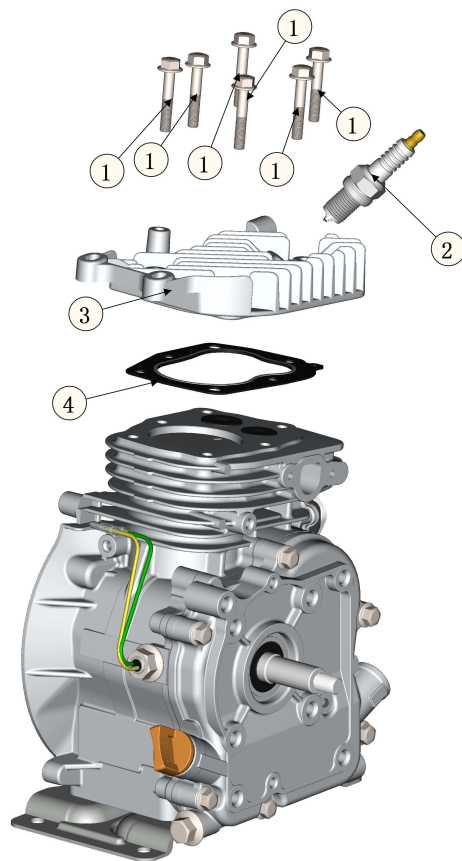 


序号	零件编码	零件名称		数量	
		中文	英文		
1	15000079	螺栓 M6×35 GB5789	Bolt M6×35	6	

2	10040002	火花塞	Spark plug	1	
3	10030002	气缸盖	Cylinder head cover	1	
4	10080001	气缸垫	Cylinder head gasket	1	

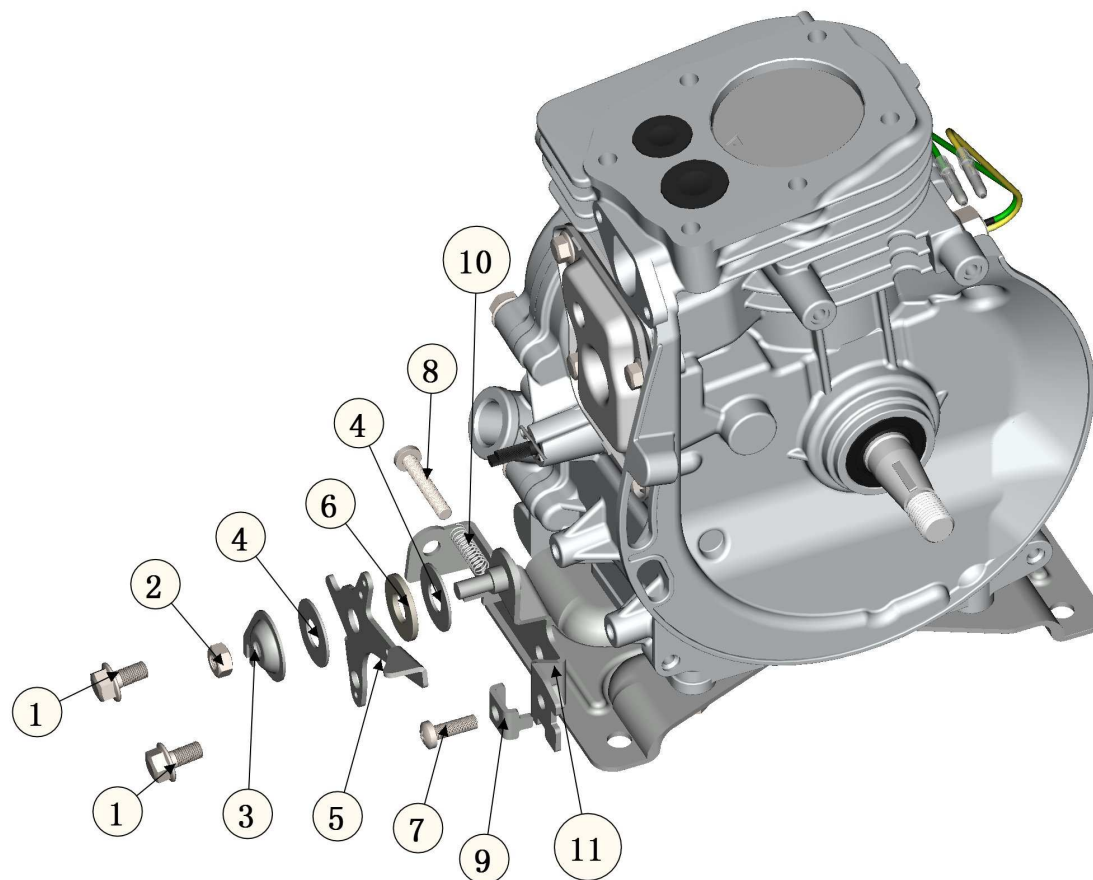 


序号	零件编码	零件名称		数量	
		中文	英文		
1	15000089	螺栓 M6×12 GB5789	Bolt M6×12	2	

2	15010013	螺母 6 GB6170	Nut 6	1	
3	21263004	调速定位板	Governor allocation board	1	
4	21268004	弹簧片	Valve guide piece	2	
5	21262004	调速手柄	Governor handle	1	

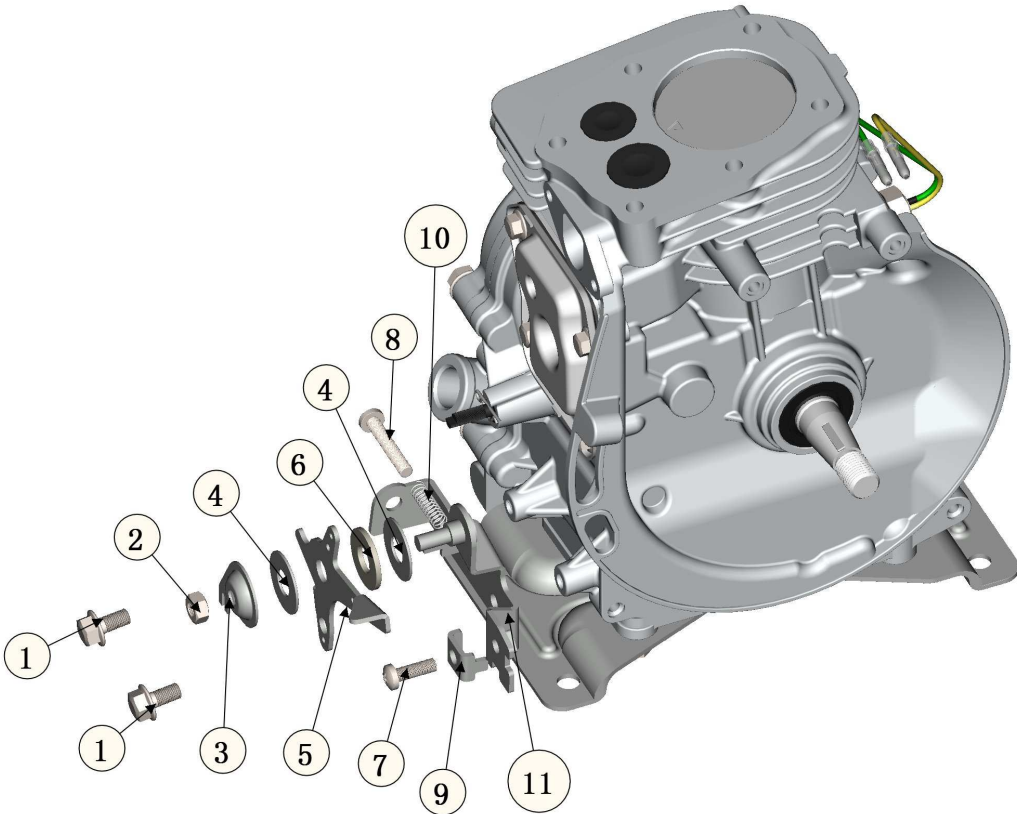 

序号	零件编码	零件名称		数量	
		中文	英文		
6	21266004	垫圈	washer	1	


7	15000230	螺钉 M5×16 GB818	Bolt M6*16	1	
8	15000352	螺钉 M5×25 GB818	Bolt M6*25	1	
9	21267004	压板	Clamp	1	
10	21264006	调整弹簧	Regulating spring	1	
11	21261004	调速支撑板	Support panel	1	

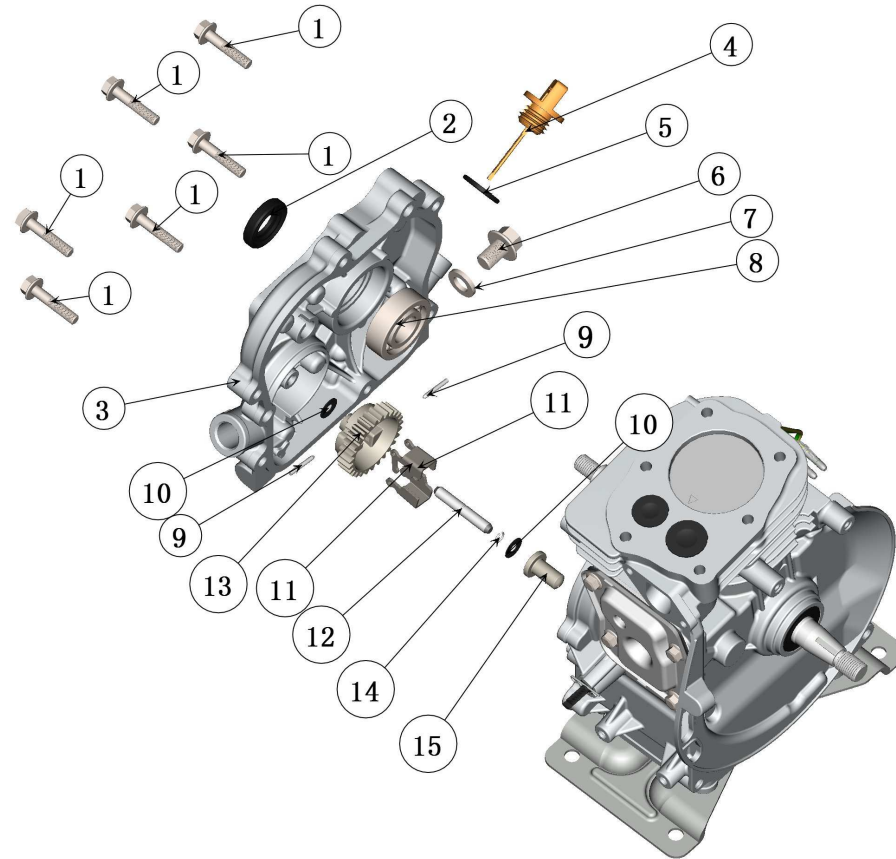 

序号	零件编码	零件名称		数量	
		中文	英文		
1	15000080	螺栓 M6×30 GB5789	Bolt M6*30	6	


CHONGQING YIHU ENGINE MACHINERY COMPANY LTD

2	10170002	油封Φ17×Φ30×6	Oil seal Φ17×Φ30×6	1	
3	10180001	动力右盖	Crankcase cover	1	
4	10190007	机油尺	Oil level cap	1	
5	12610001	密封圈	Oil level cap packing	1	

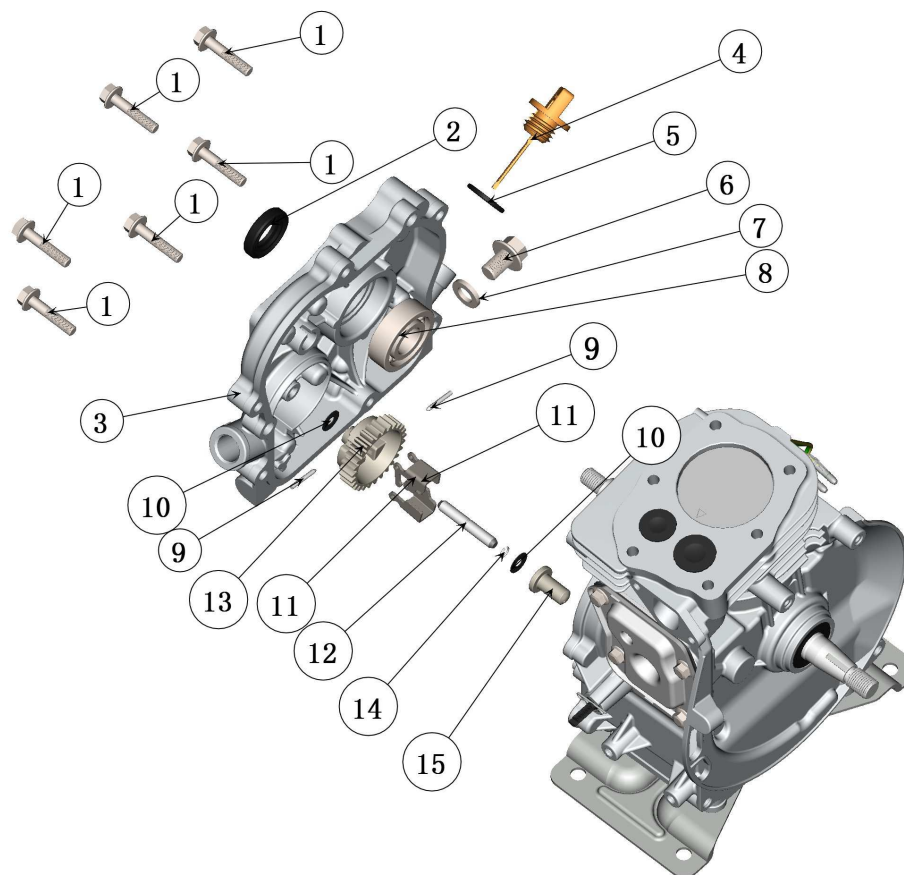 


序号	零件编码	零件名称		数量	
		中文	英文		
6	15000025	放油螺栓 M10×15 GB5787	Drain bolt M10×15	1	

7	15020014	放油垫片 $\phi 10 \times \phi 15 \times 1.5$	Drain bolt washer	1	
8	15040002	轴承 6203	Radial ball bearing(6203)	1	
9	20904004	调速离心块销轴	Governor weight pin	1	
10	20905004	调速帽垫片	Governor weight	2	

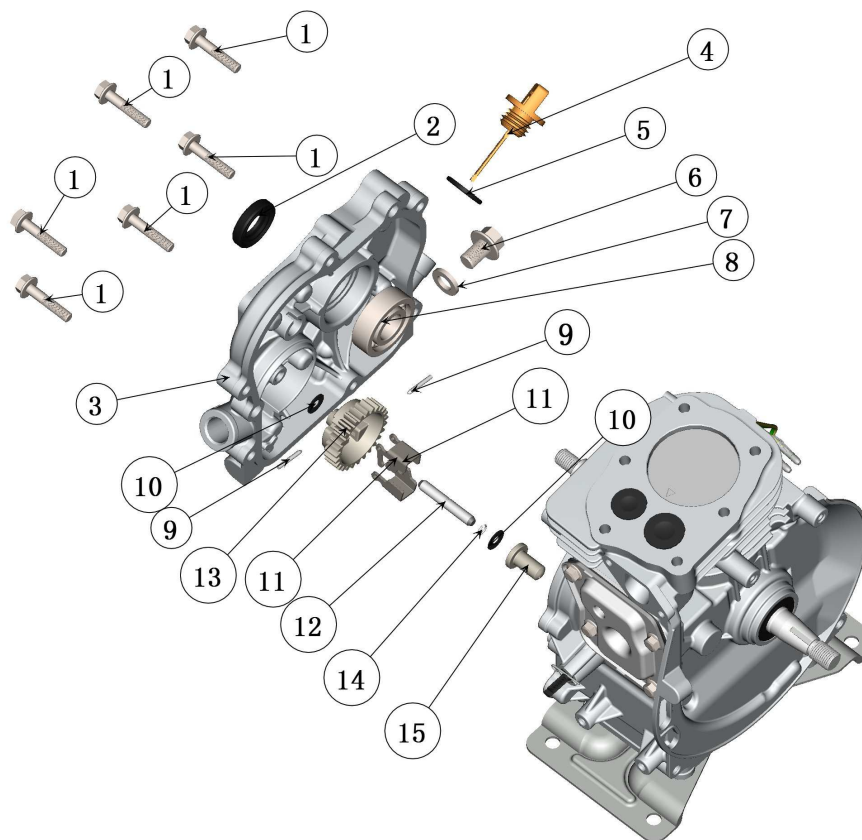 


序号	零件编码	零件名称		数量	
		中文	英文		
11	20906005	调速离心块	Governor weight pin	2	

12	20908004	调速芯轴	Speed regulating shaft	1	
13	20903004	调速从动齿	Slave gear governor	1	
14	20902004	调速轴卡圈	Governor holder clip	1	
15	20901004	调速冒	Governor slider	1	

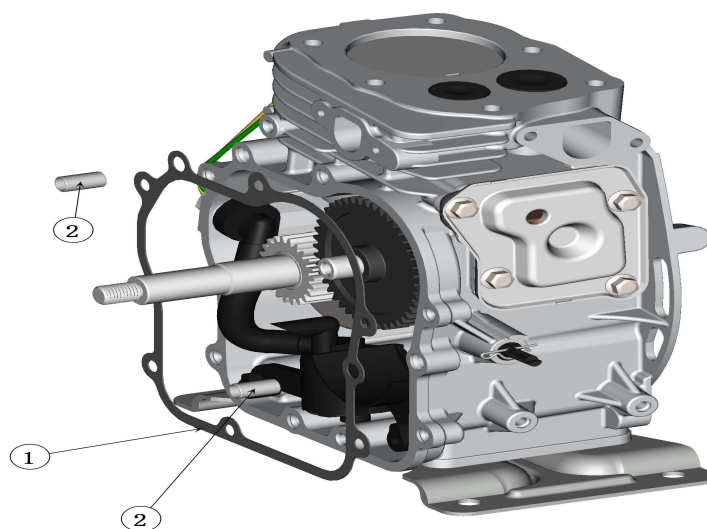 


序号	零件编码	零件名称		数量	
		中文	英文		
1	10210001	合箱纸垫	Case cover packing	2	
2	10090006	定位销	Dowel pin	1	

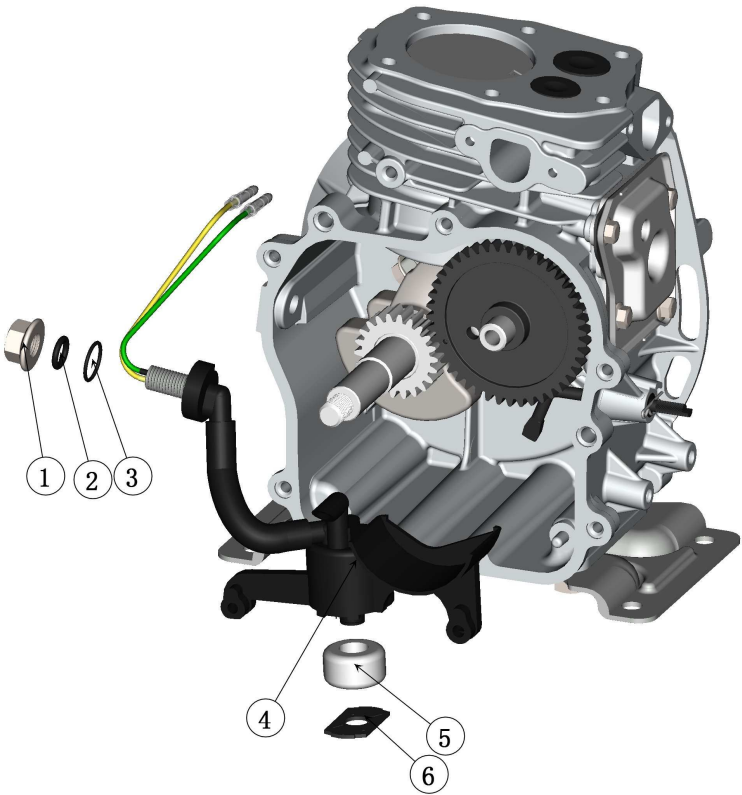 


The diagram illustrates the assembly of an engine. It shows the main engine block with various components labeled with numbers in circles: 1 (a small metal cap), 2 (a small black O-ring), 3 (a small metal ring), 4 (a larger metal cap), 5 (a black O-ring), and 6 (a small metal pin). A green and yellow cable is also shown connected to the engine.

序号	零件编码	零件名称		数量	
		中文	英文		
1	15010009	螺母 M10 GB6177	Nut M10 GB6177	1	
2	21252002	密封圈Φ10	Oil level cap packing Φ10	1	
3	21252003	密封圈Φ14	Oil level cap packing Φ14	1	
4	21253001	机油传感器主体	Oil sensor main part	1	
5	21254001	机油传感器浮子	Oil sensor floater	1	
6	21255001	压板	Clamp	1	

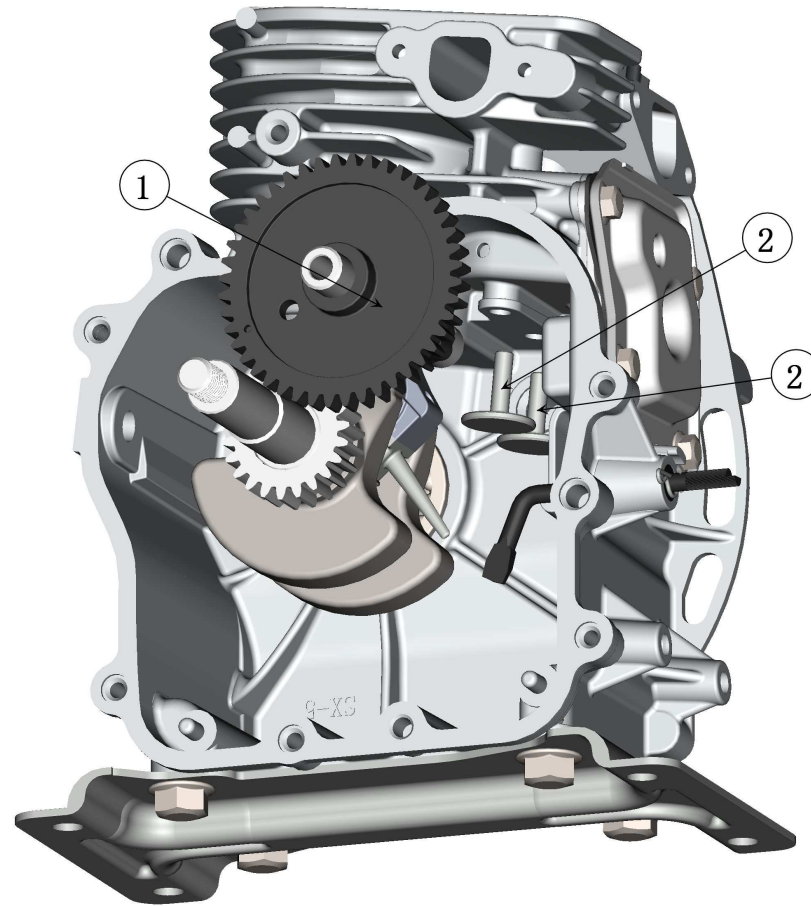 


序号	零件编码	零件名称		数量	
		中文	英文		

1	10390001	凸轮轴	Camshaft	1	
2	10380001	挺柱	Valve lifter	2	

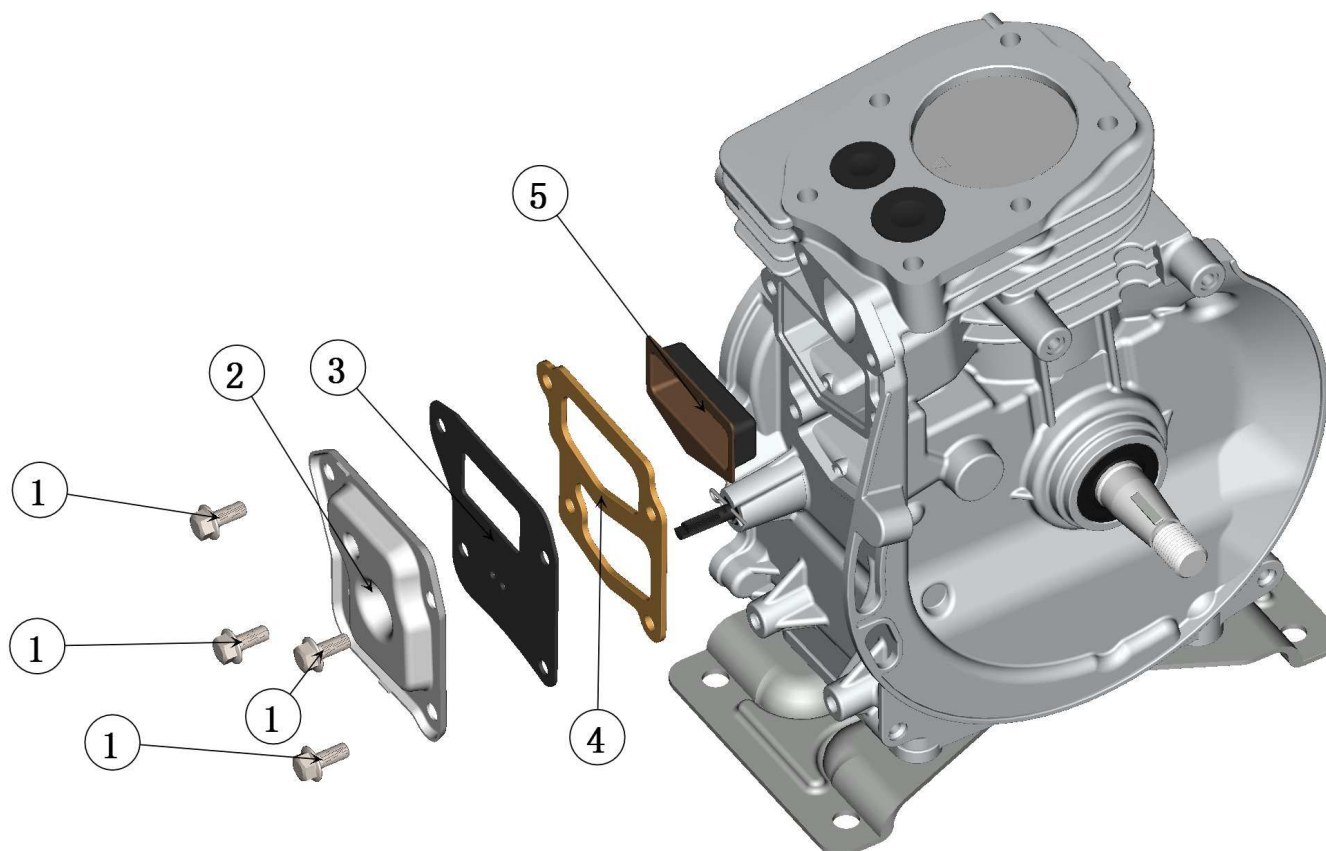 


序号	零件编码	零件名称		数量	
		中文	英文		
1	15000115	螺栓 M5×12 GB5789	Bolt M5×12 GB5789	4	
2	10010001	回油室盖板	Return house cover board	1	
3	10610002	回油室石棉垫	Return house asbestos pad	1	
4	10610001	回油盖软木密封垫	Return cover cork gland	1	
5	10020001	回油室盖	Return house cover	1	

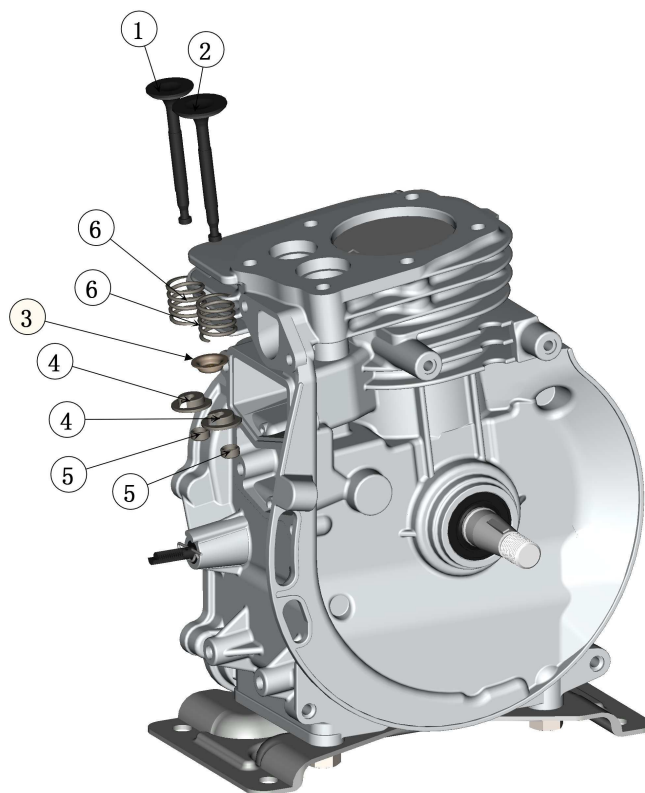 


序号	零件编码	零件名称		数量	
		中文	英文		
1	10320001	排气门	Exhaust valve	1	
2	10310001	进气门	Intake valve	1	

3	10410001	挡油罩	Splash cover	1	
4	10300004	气门弹簧座	Valve spring seat	2	
5	10350001	顶冒	Valve rotator	2	
6	10300001	气门弹簧	Valve spring	2	

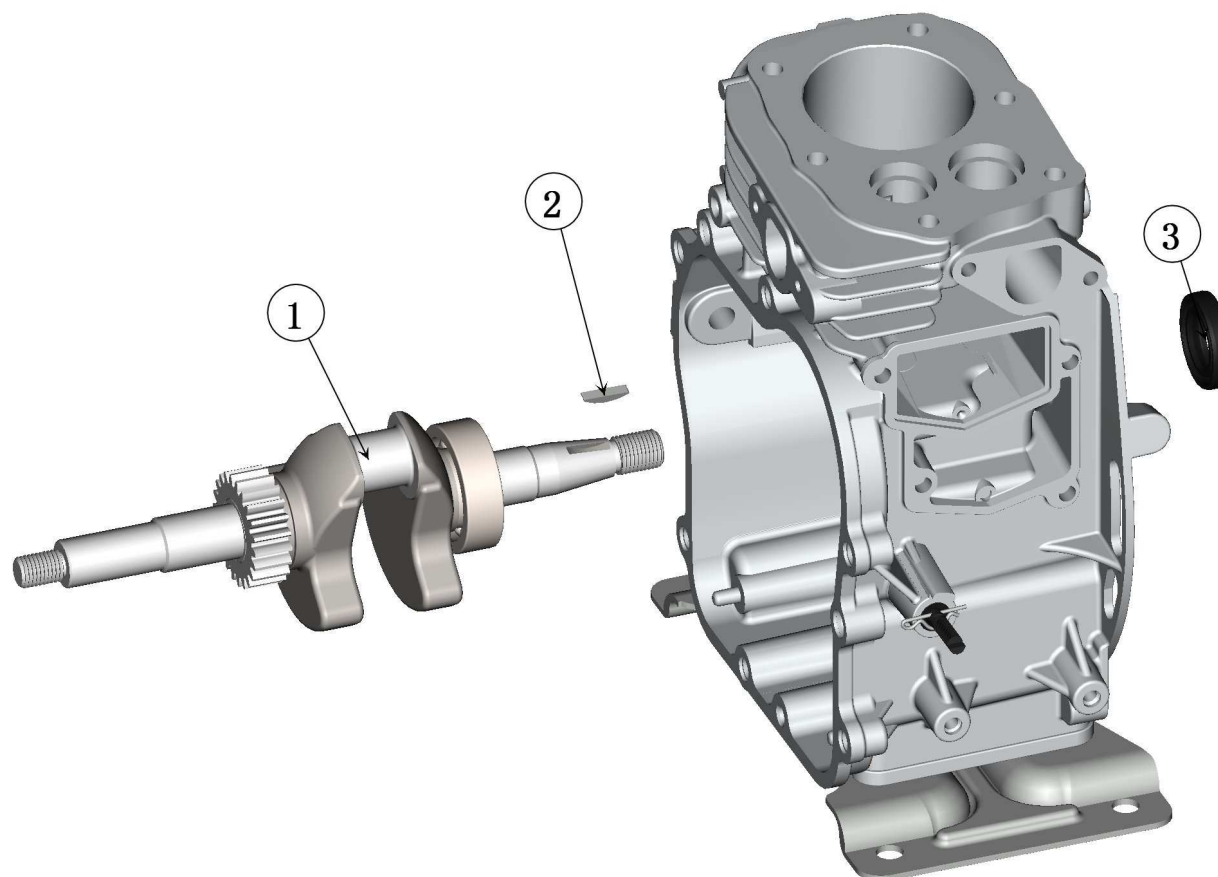 


序号	零件编码	零件名称		数量	
		中文	英文		
1	10230062	曲轴	Crankshaft	1	


2	15030001	半圆键 3×3×Φ13	woodruff key 3×3×Φ13	1	
3	10170001	油封φ17×φ30×6	Oil seal φ17×φ30×6	1	

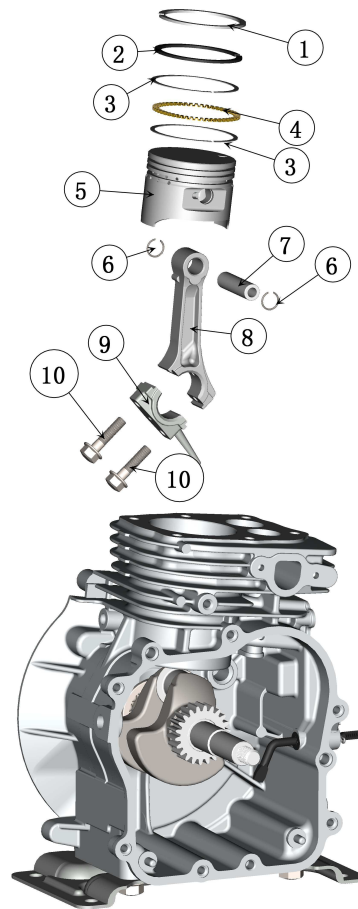 


序号	零件编码	零件名称		数量	
		中文	英文		
1	20401002	气环I	First ring set	1	
2	20402002	气环II	Second ring set	1	
3	20405002	刮油片	Oil scraper	2	
4	20404002	衬环	Bushing ring	1	
5	10240002	活塞	Piston	1	

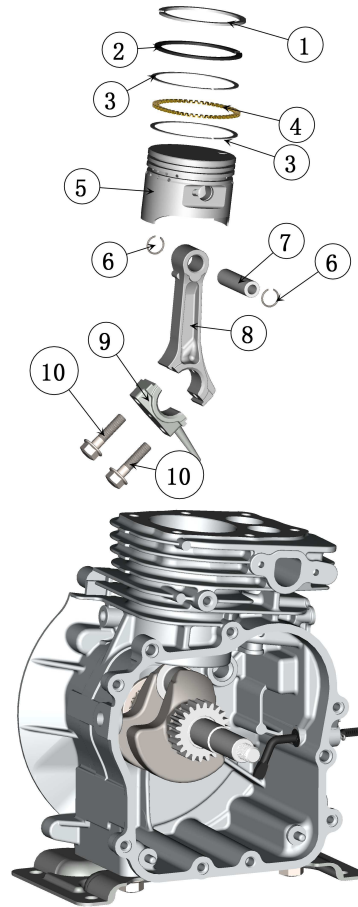 

序号	零件编码	零件名称		数量	
		中文	英文		
6	10280002	活塞销挡圈	Piston pin clip	2	

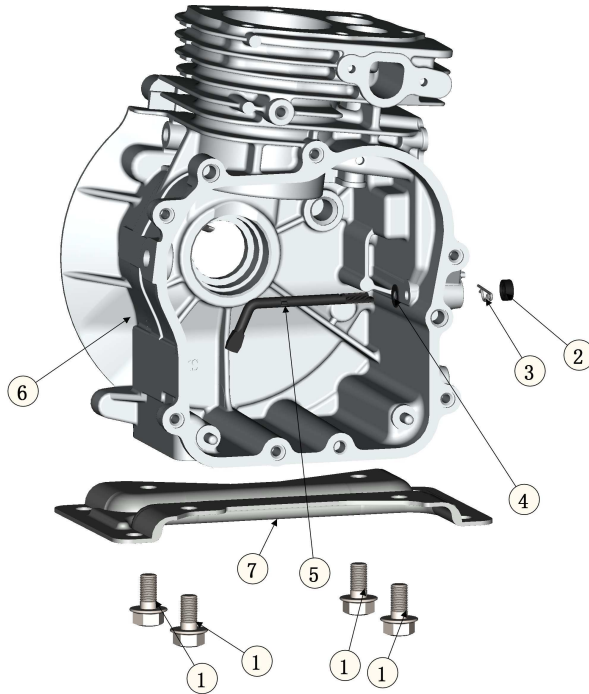 
 The diagram shows an exploded view of a carburetor assembly. The main components are labeled as follows: 1: Four screws used to secure the base plate. 2: A small black O-ring or seal. 3: A small pin or clip. 4: A long, thin metal plate or gasket. 5: A small metal pin or clip. 6: The main carburetor body. 7: The base plate.				
序号	零件编码	零件名称	数量	

		中文	英文		
1	15000055	螺栓 M8×16	Flange Bolt M8×16	4	
2	10880001	摆杆油封φ5×φ10×4	Oil seal of Governor Arm	1	
3	10220001	止退夹	Lock Pin	1	
4	15020027	摆杆垫片φ5	Plain Washer	1	
5	10120001	调速摆杆	Governor Arm	1	
6	10110002	箱体总成	Crankcase Assy	1	
7	10440001	动力底板	Bottom. Crankcase Body	1	

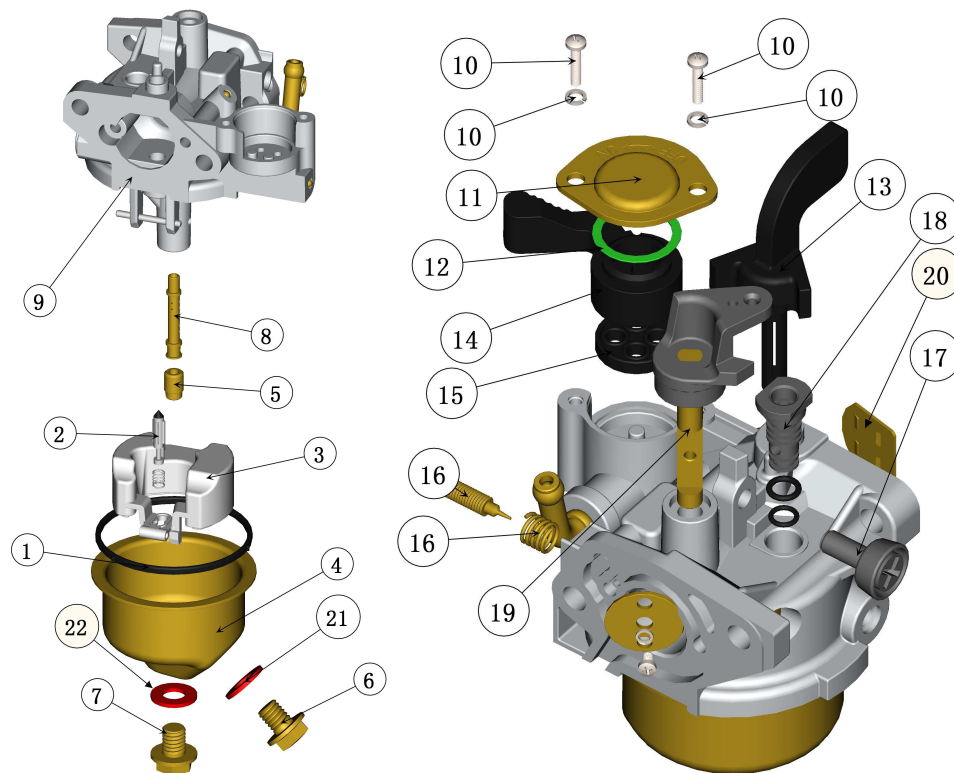 


序号	零件编码	零件名称		数量	
		中文	英文		
1	20301004	浮子室密封垫	Float Chamber Gasket	1	
2	20302004	浮子室油针组合	Float Needle	1	

3	20303004	浮子组合	Float	1	
4	20304004	浮子室组合	Float Chamber	1	
5	20320004	主喷油嘴	Main jet	1	
6	20307003	浮子室放油螺钉	Float Chamber drain screw	1	
7	20306003	底部螺钉	Screw	1	

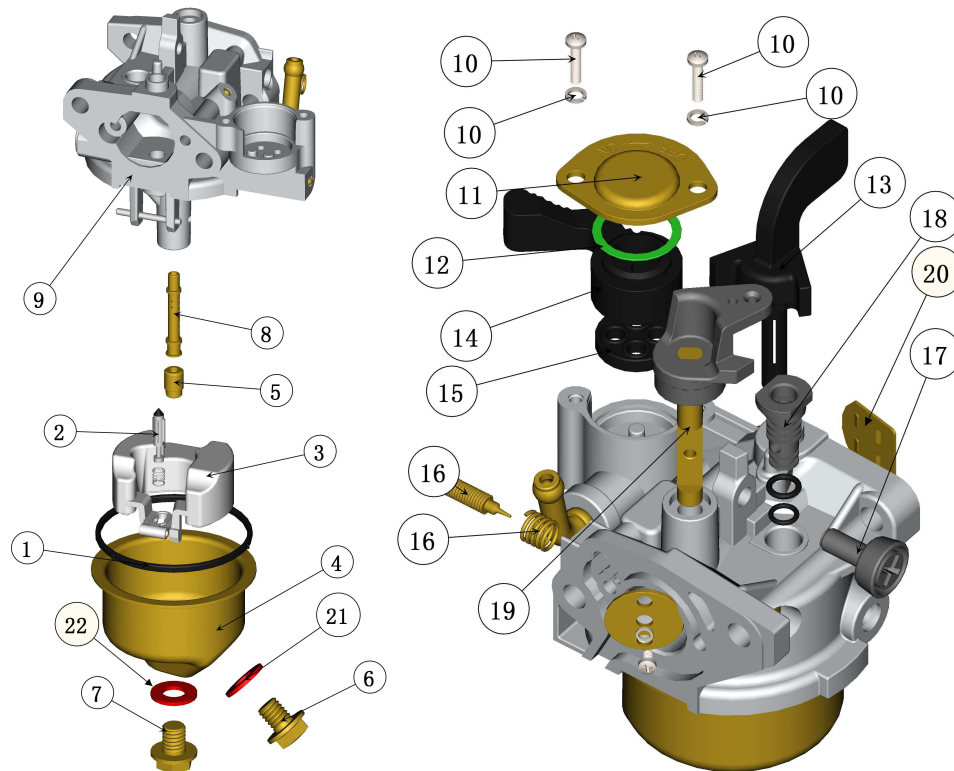 

序号	零件编码	零件名称		数量	
		中文	英文		
8	20310004	主喷油嘴	Main Nozzle	1	
9	20322001	化油器混合室体	Mixture chamber body	1	

10	20318001	螺钉 M4	Screw M4	2	
11	20314004	油门控制臂固定盖	Cover	1	
12	20315004	油门控制臂钢垫片	Washer. Throttle lever	1	
13	20312004	阻风门调节杆	Choke lever	1	
14	20313004	油门控制臂	Throttle lever	1	

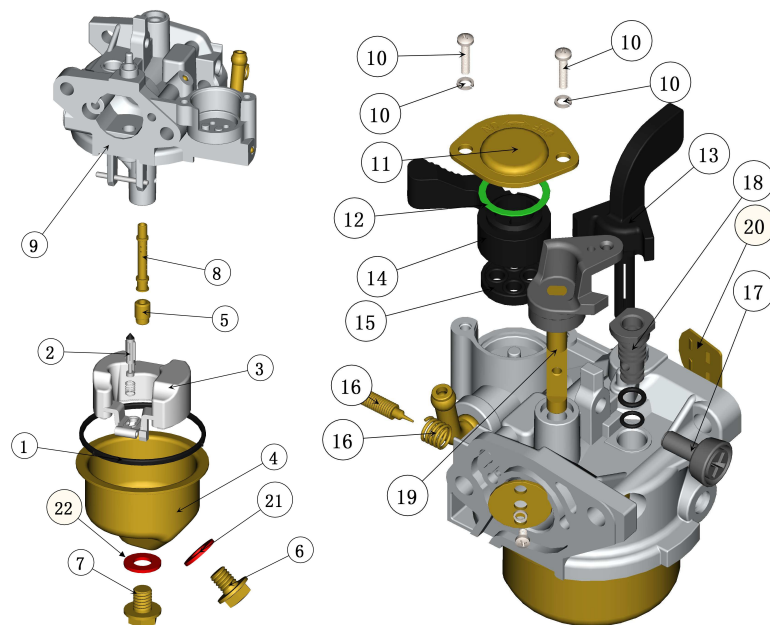 

序号	零件编码	零件名称		数量	
		中文	英文		
15	20316004	油门控制臂密封圈	Packing ring. Throttle lever	1	
16	20309004	混合比调整螺钉	Mixture adjustment screw	1	
17	20305004	怠速调整螺钉	Idle adjustment screw	1	
18	20321004	定位喷油嘴	Pilot jet set	1	
19	20323004	节气门组合	Throttle unit	1	
20	20308004	阻风门	Choke	1	
21	20329001	放油螺钉密封垫	Washer. drain screw	1	
22	20327003	底部螺钉密封垫	Washer. Float chamber bottom	1	