
















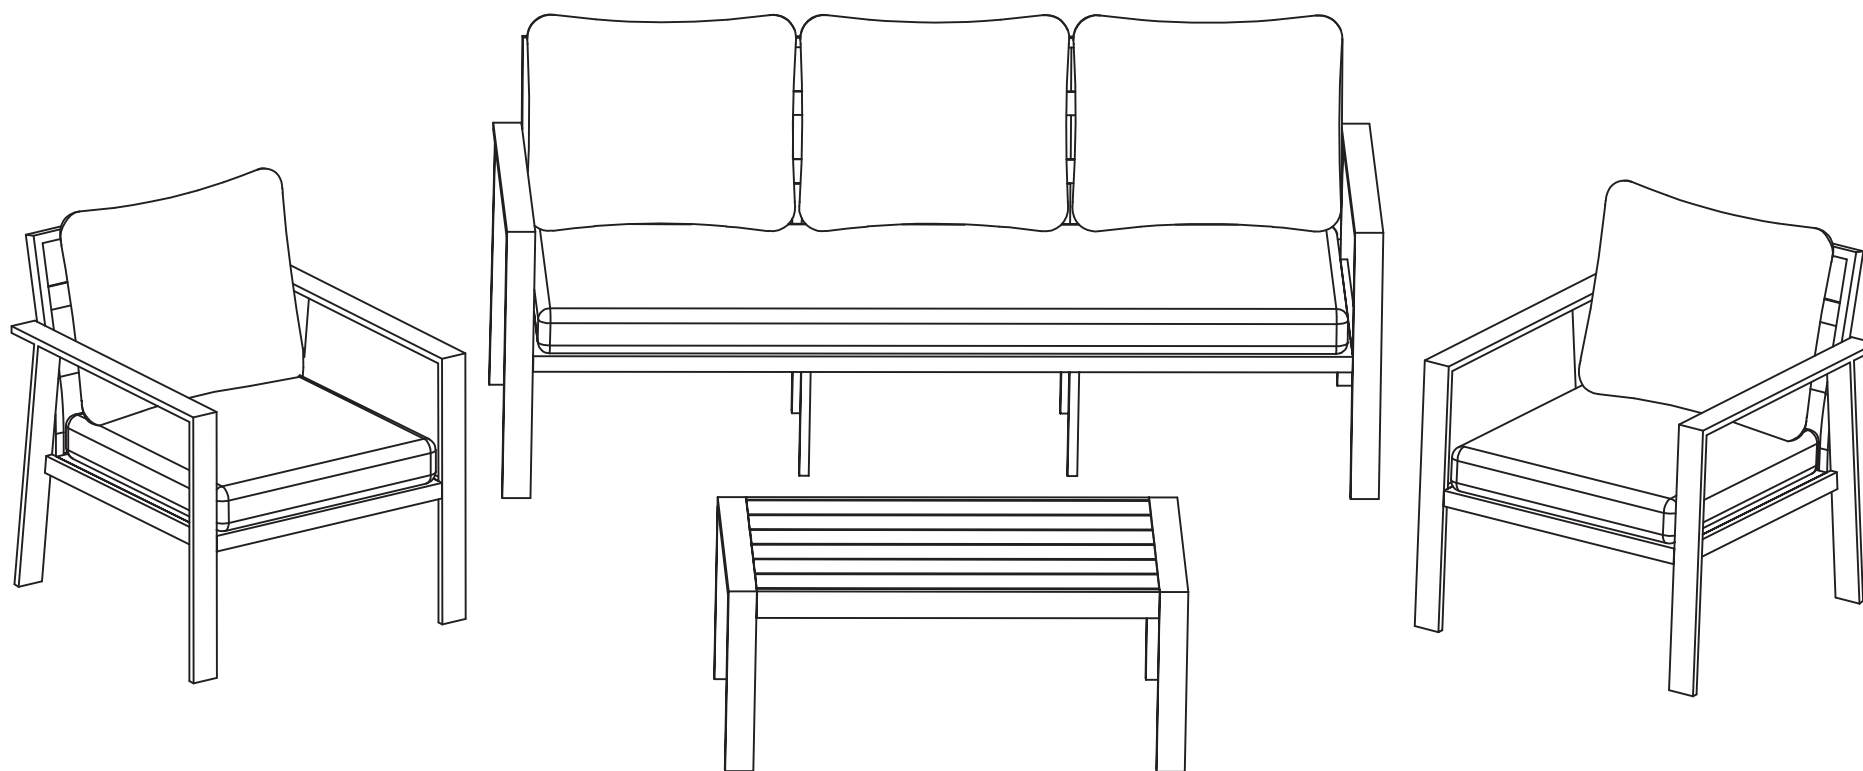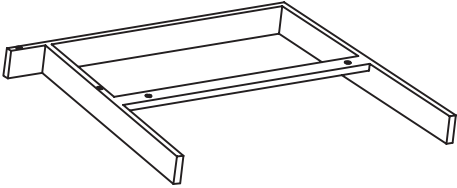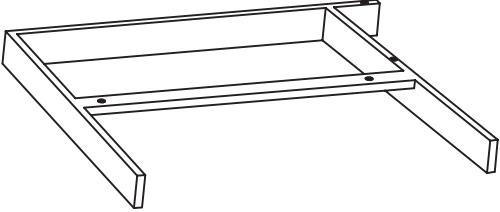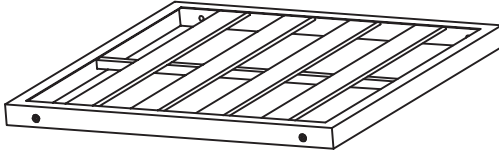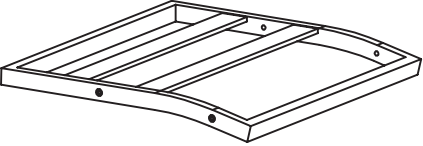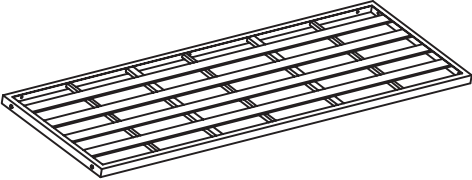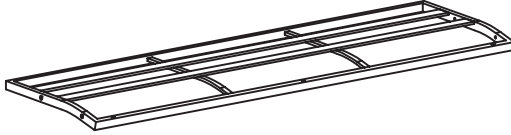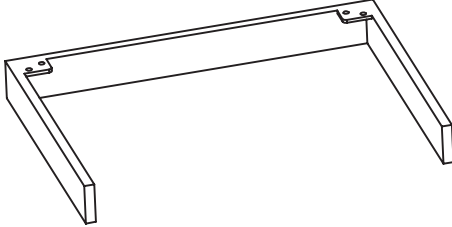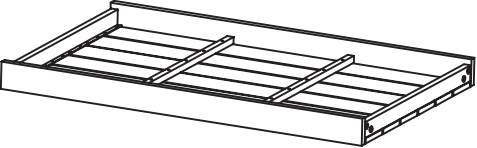


Instrucciones de montaje




NO.		QTY	NO.		QTY	NO.		QTY
A		3	B		3	C		2
D		2	E		1	F		1
G		2	H		2	K		2
M		1	X	 M6x25	15	X2	 M6x20	8
			X1	 M6x35	12	X3	 M6x15	8
Y		43	Z		1			


PASO 1

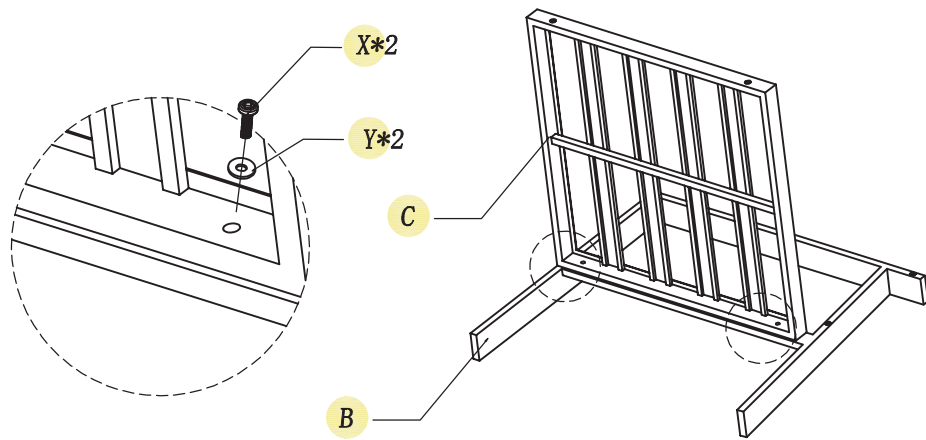


PASO 2

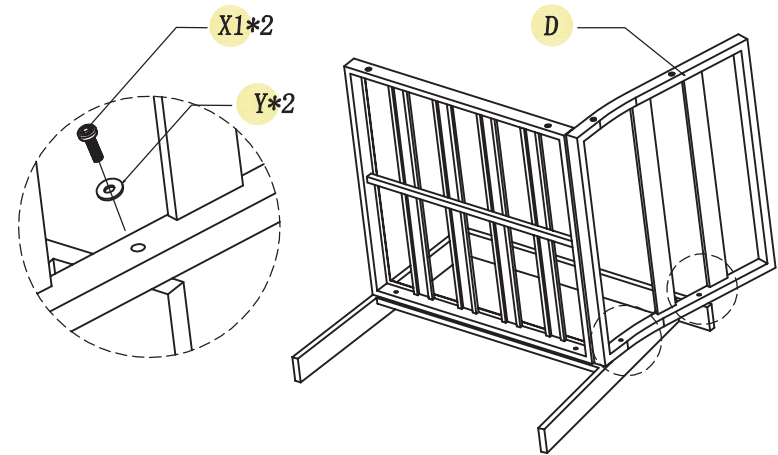


PASO 3

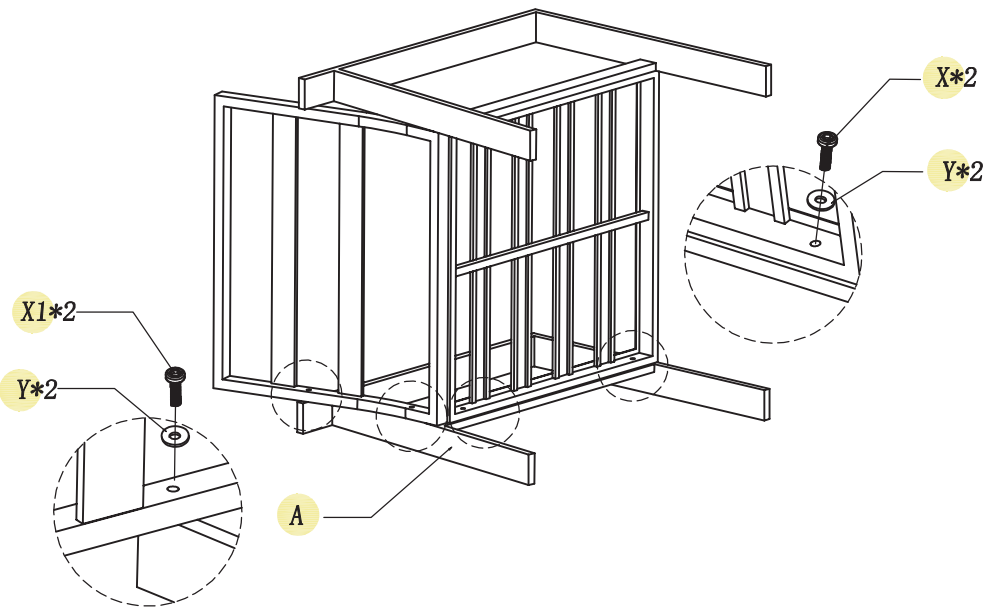


PASO 4

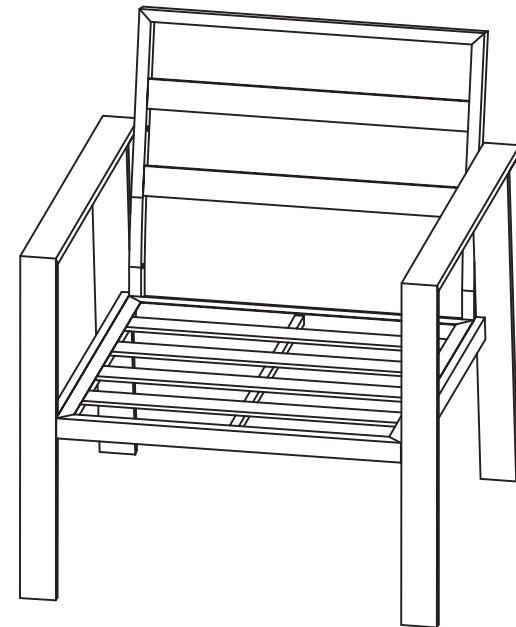


PASO 5

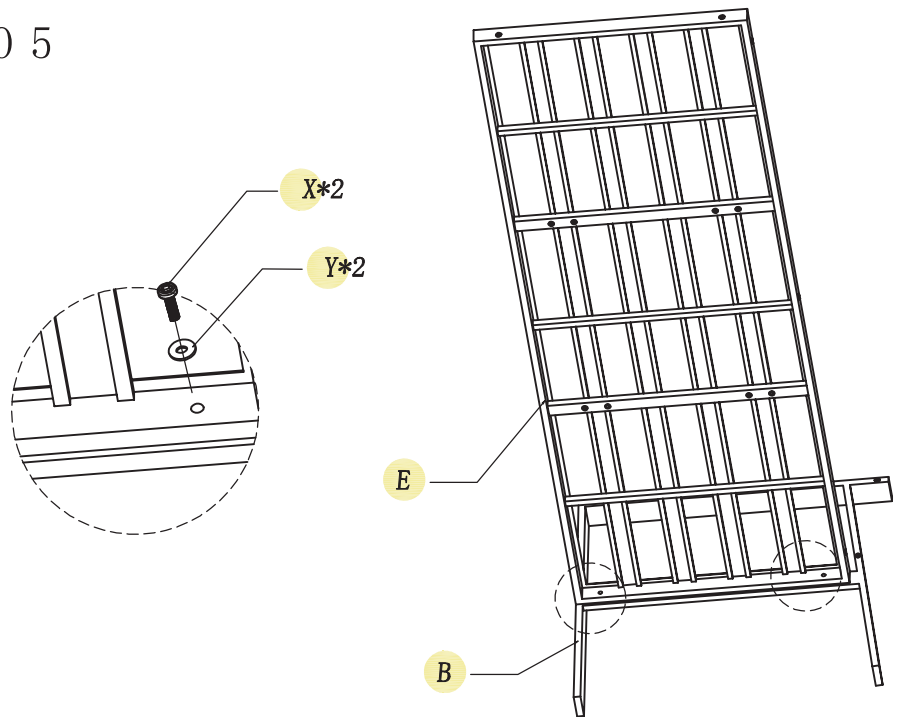


PASO 6

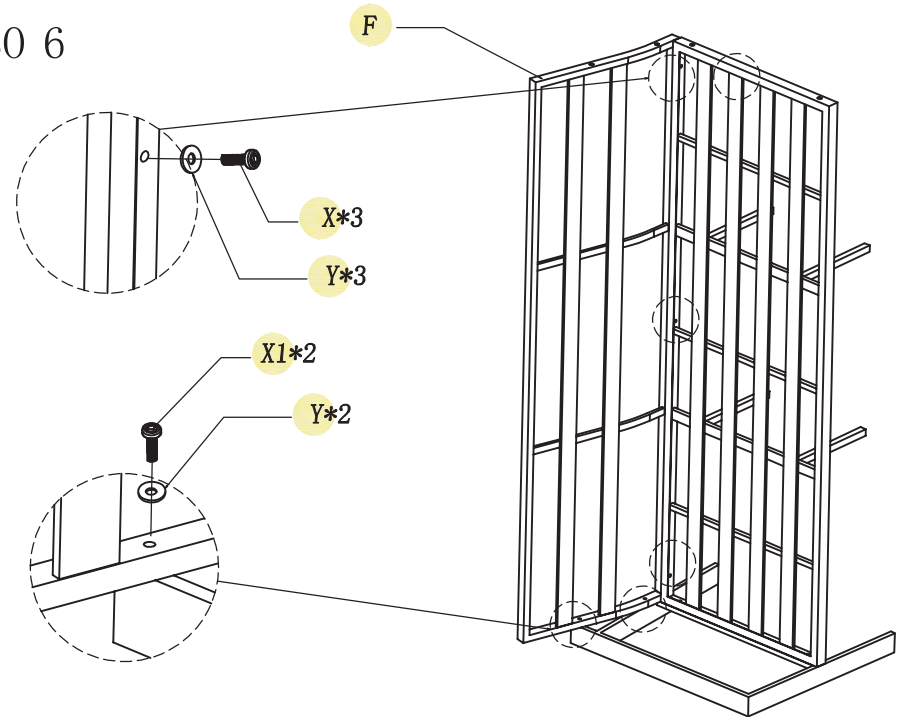


PASO 7

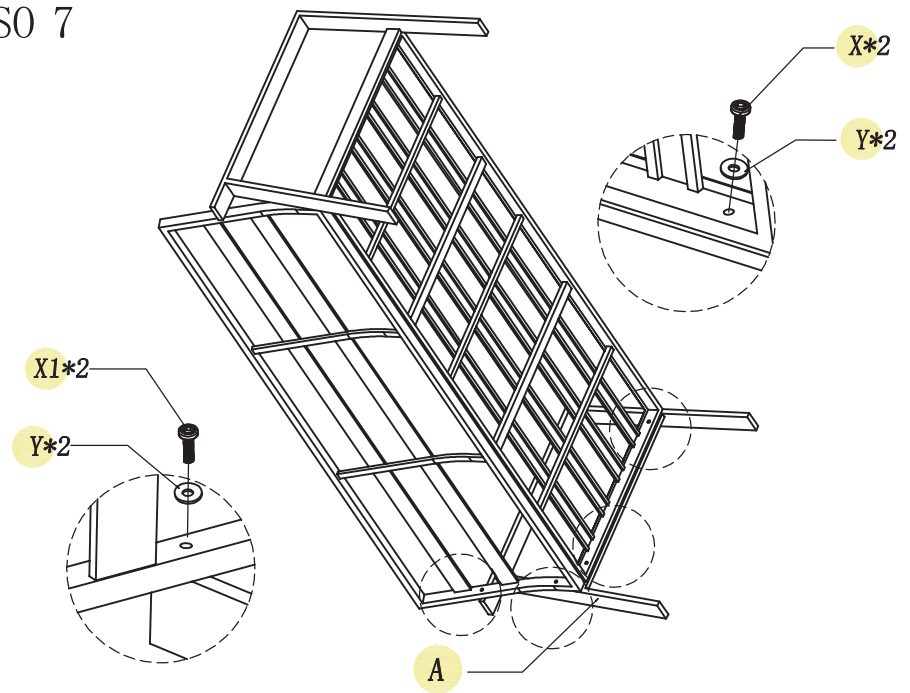


PASO 8

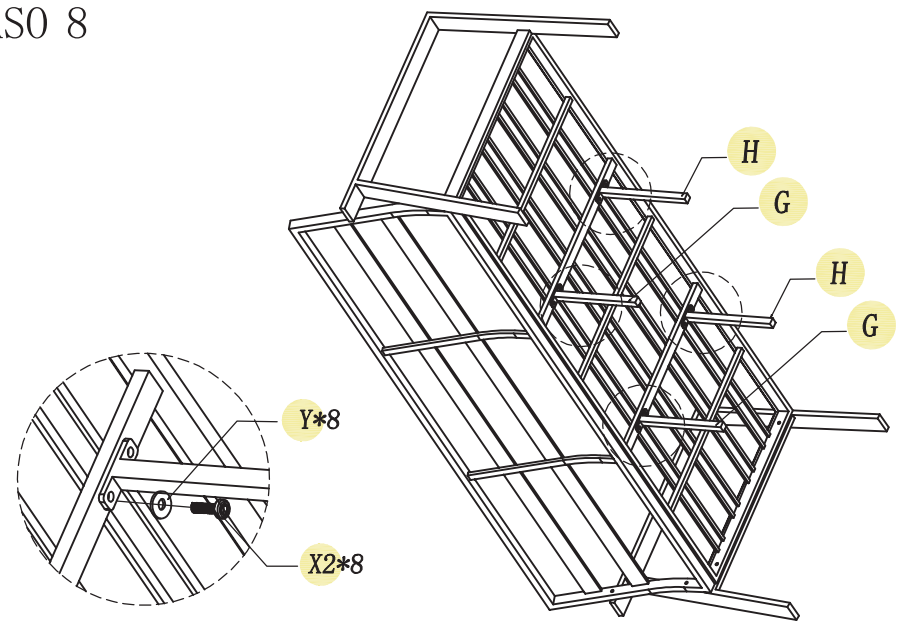

PASO 9

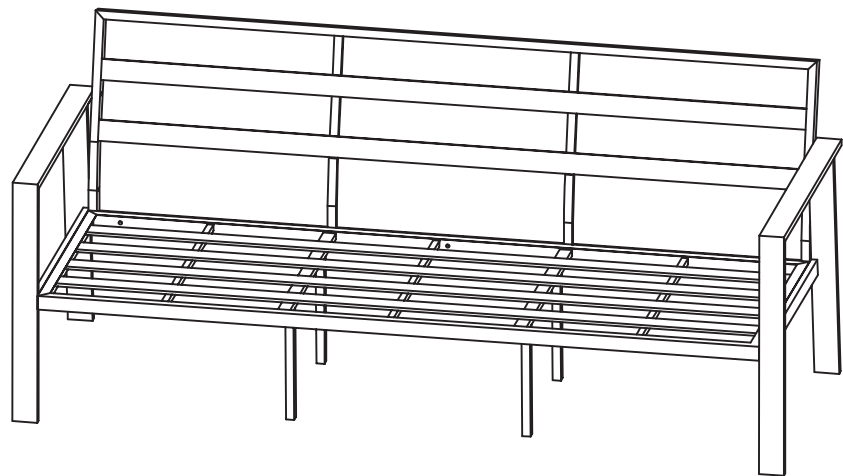

PASO 11

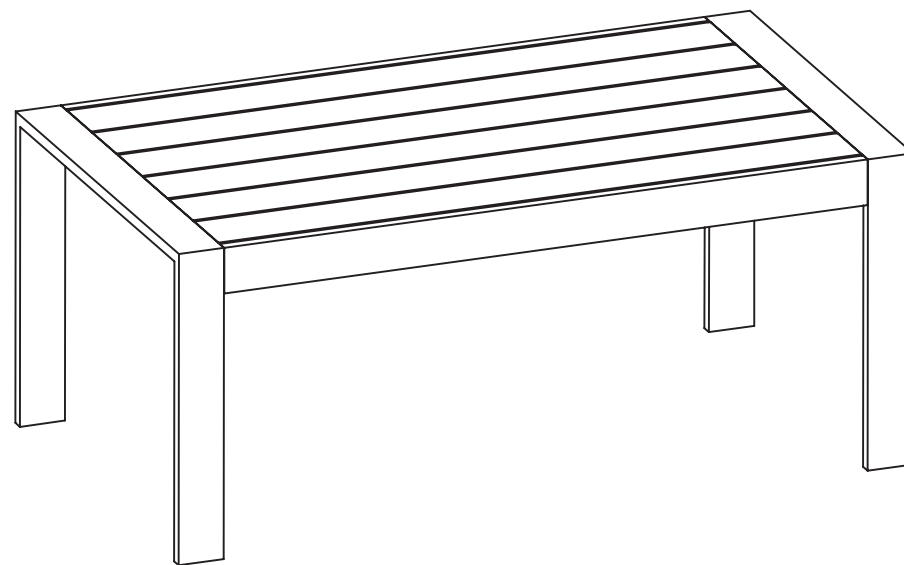

PASO 10

